


13.VDC OFF Switch

A: REMOVAL


- 1) Remove the cover assembly - instrument panel LWR driver.
 - (1) Remove the clips, and remove the cover - instrument panel side LH.

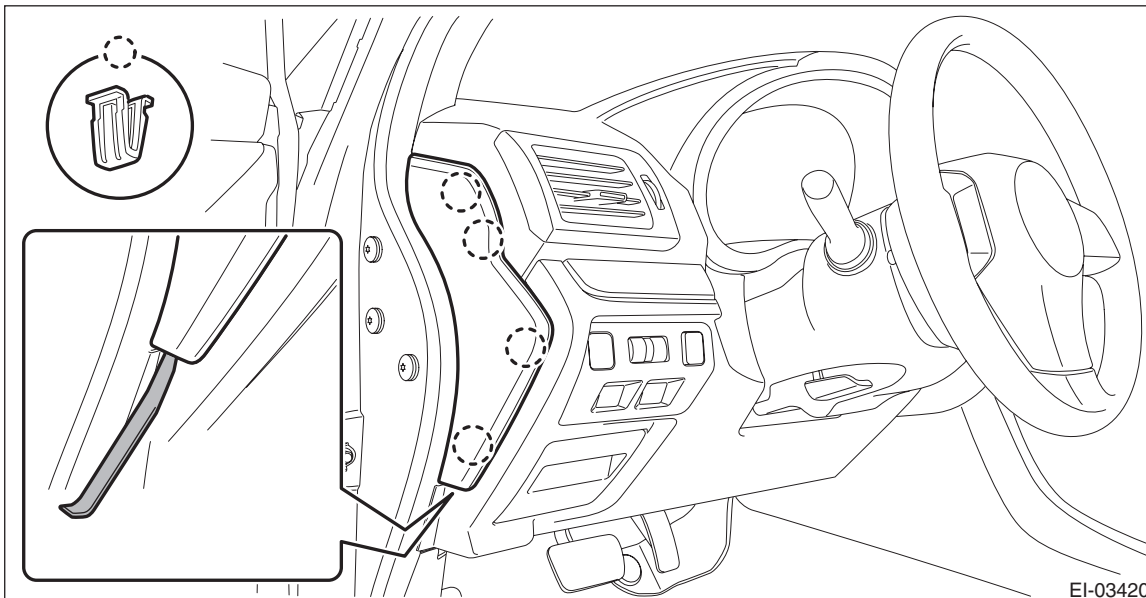

NOTE:

Using a plastic remover, open the cover - instrument panel side LH.


- (2) Remove the screws and release the clips and claws.
- (3) Disconnect the harness connectors, and remove the cover assembly - instrument panel LWR driver OUT.

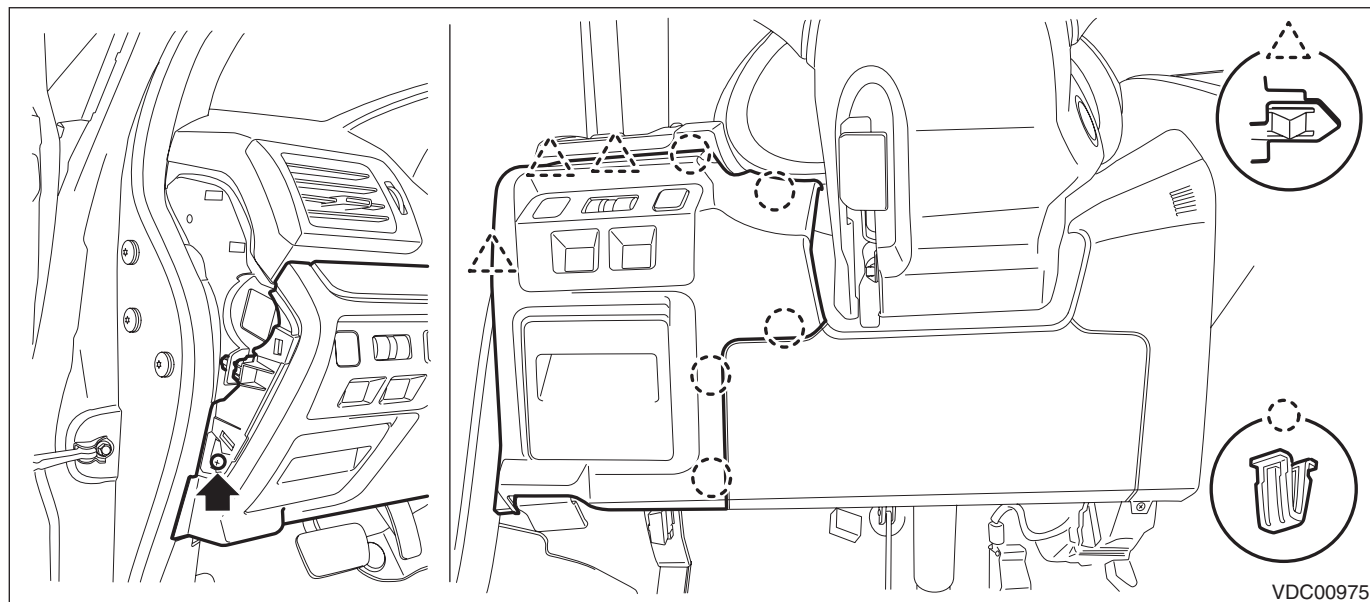


VDC OFF Switch

VEHICLE DYNAMICS CONTROL (VDC)

2) Remove the screws and release the claws, then detach the cover.

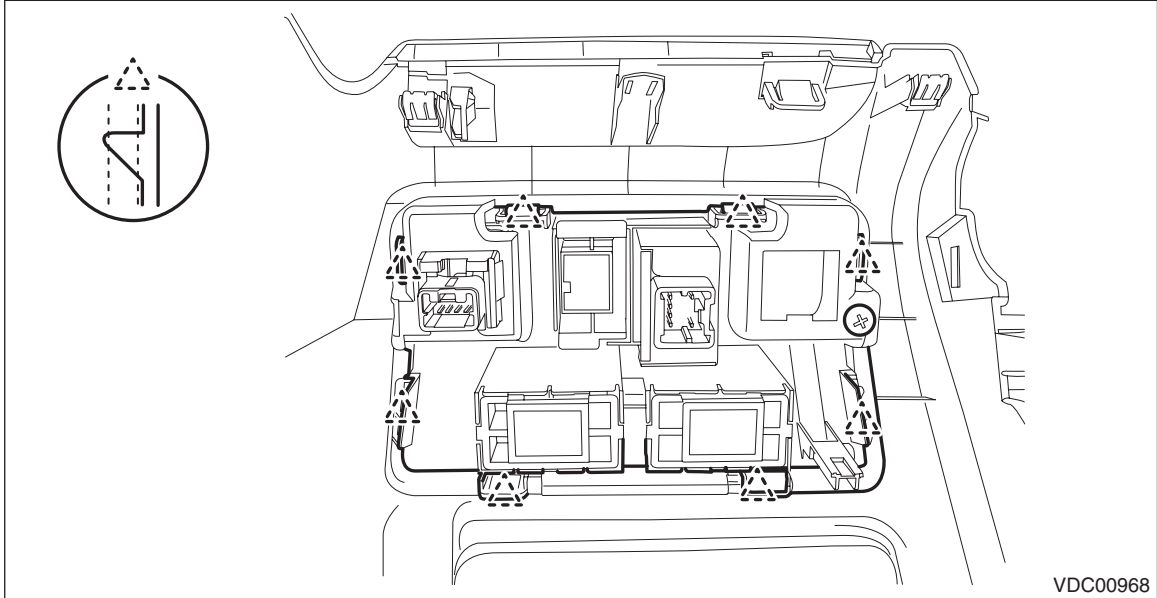

3) Release the claws and remove the VDC OFF switch.

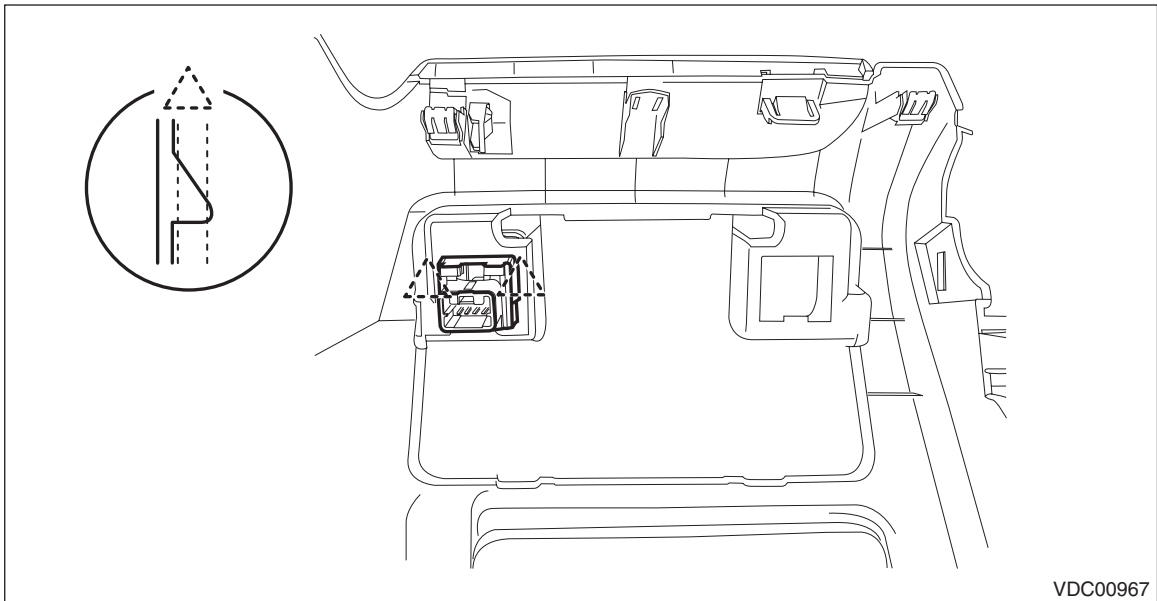

B: INSTALLATION

Install each part in the reverse order of removal.

VDC OFF Switch


VEHICLE DYNAMICS CONTROL (VDC)

C: INSPECTION

- 1) Disconnect the VDC OFF switch connector.
- 2) Check the resistance between the VDC OFF switch terminals.

PREPARATION TOOL:

Circuit tester

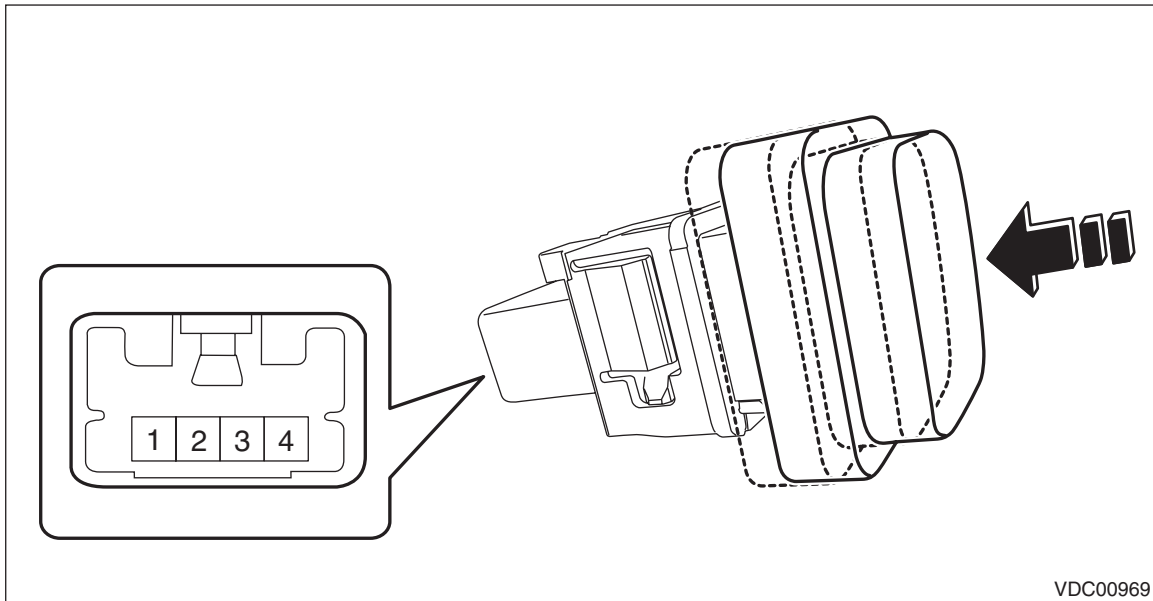

Terminal No.	Inspection conditions	Standard
2 — 3	Switch OFF	1 M Ω or more
	Switch ON	Less than 1 Ω

- 3) Replace the VDC OFF switch if the inspection result is not within the standard value.

VEHICLE DYNAMICS CONTROL (VDC) (DIAGNOSTICS)

VDC(diag)

	Page
1. Basic Diagnostic Procedure	2
2. Check List for Interview	4
3. General Description	8
4. Electrical Component Location	10
5. Control Module I/O Signal	12
6. Subaru Select Monitor	16
7. Read Diagnostic Trouble Code (DTC)	22
8. Inspection Mode	23
9. Clear Memory Mode	24
10. Warning Light Illumination Pattern	25
11. List of Diagnostic Trouble Code (DTC)	35
12. Diagnostic Procedure with Diagnostic Trouble Code (DTC)	39
13. General Diagnostic Table	84