


Front Crossmember Support Plate

FRONT SUSPENSION

4. Front Crossmember Support Plate


A: REMOVAL

- 1) Lift up the vehicle.
- 2) Remove the bolts and clips, and remove the under cover - front.

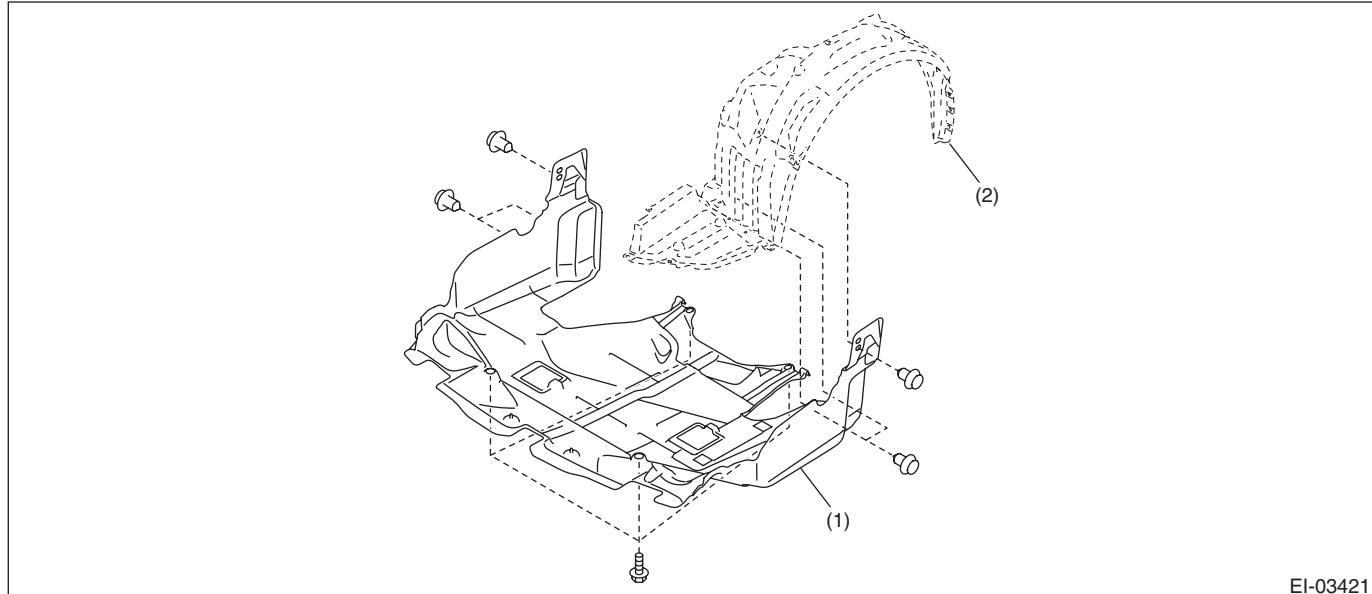

(1) Under cover - front (2) Mud guard - front

- 3) Remove the bolt, and remove the front crossmember support.

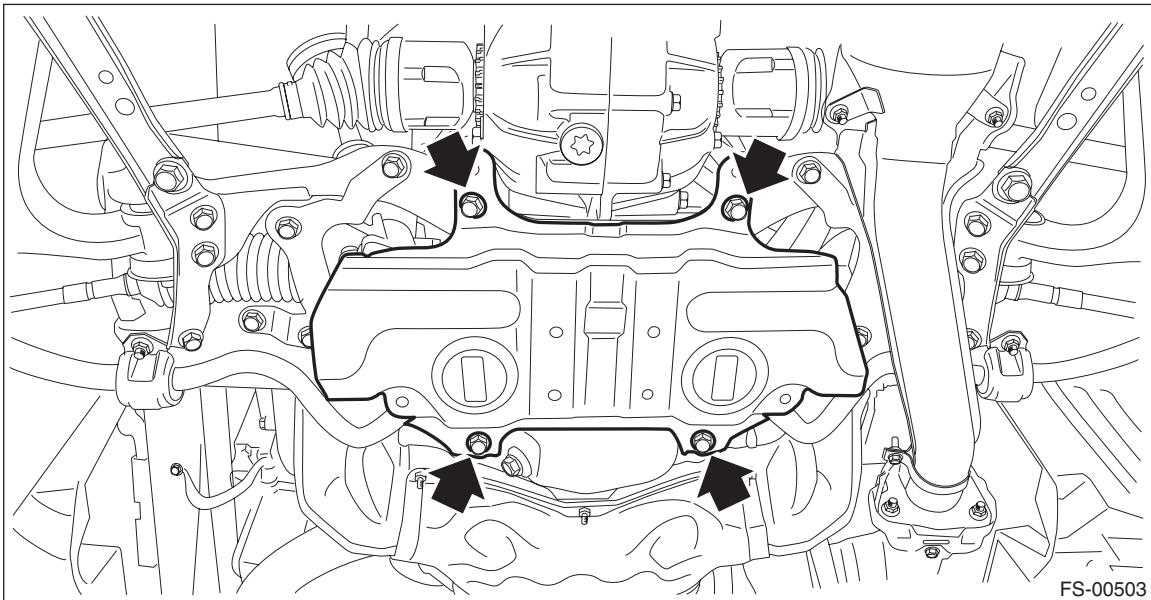

B: INSTALLATION

Install each part in the reverse order of removal.

Tightening torque:

Front crossmember support — front crossmember assembly: 60 N·m (6.12 kgf·m, 44.3 ft-lb)

Under cover - front: 17.5 N·m (1.78 kgf·m, 12.9 ft-lb)