


2. Relay and Fuse

A: LOCATION

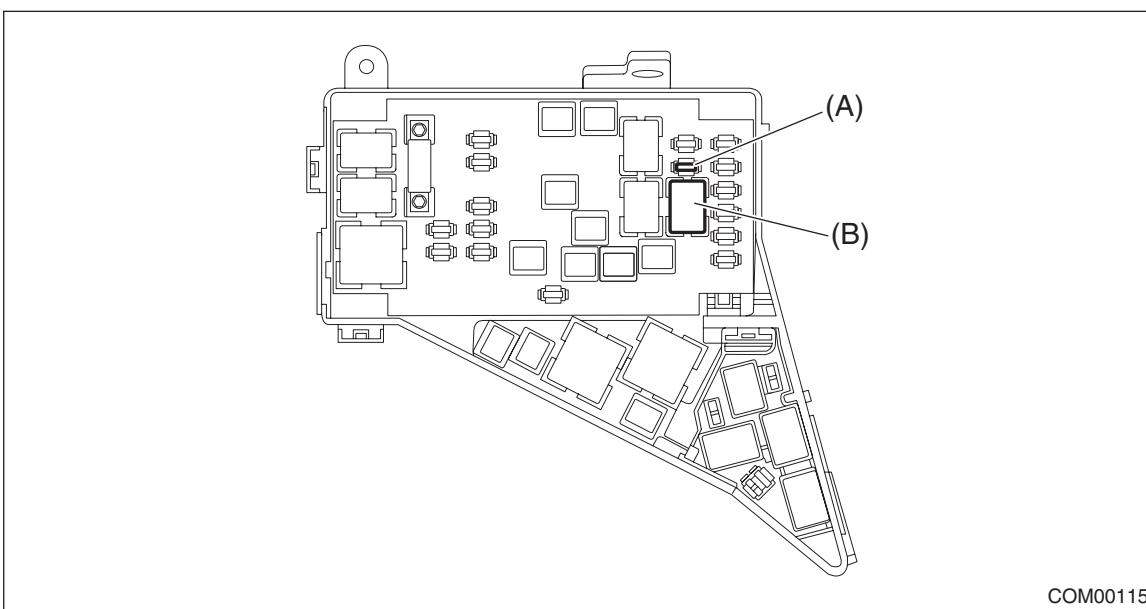

Main fuse box	Fuse 15 A (horn ASSY - Hi, Lo)	(A)
	Horn relay	(B)

NOTE:

For other related fuses, refer to the wiring diagram. <Ref. to WI-15, Power Supply Circuit.>

B: INSPECTION

1. CHECK FUSE

- 1) Remove the fuse and check visually.
- 2) If the fuse is blown out, replace the fuse.

2. CHECK RELAY

- 1) Check the resistance between relay terminals.

Terminal No.	Inspection conditions	Specification	Circuit
1 — 2	Always	1 MΩ or more	<p>The table row for terminal 1-2 spans two rows. The first row shows the terminal number 1-2 with inspection conditions 'Always' and a specification of '1 MΩ or more'. The second row shows the terminal number 1-2 with inspection conditions 'Apply battery voltage between 4 — 3 terminals.' and a specification of 'Less than 1 Ω'. To the right of the table, there is a diagram of a relay terminal block with terminals 1, 2, 3, and 4. Below it is a circuit diagram showing a battery connected to terminal 1, terminal 2 connected to a switch, terminal 3 connected to a coil, and terminal 4 connected to ground. Reference code 'SR-00180' is located at the bottom right of the table area.</p>
1 — 2	Apply battery voltage between 4 — 3 terminals.	Less than 1 Ω	

- 2) Replace the relay if the inspection result is not within the standard value.