


Diagnostic Chart for Self-Diagnosis

HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS)

5. Diagnostic Chart for Self-Diagnosis

A: OPERATION

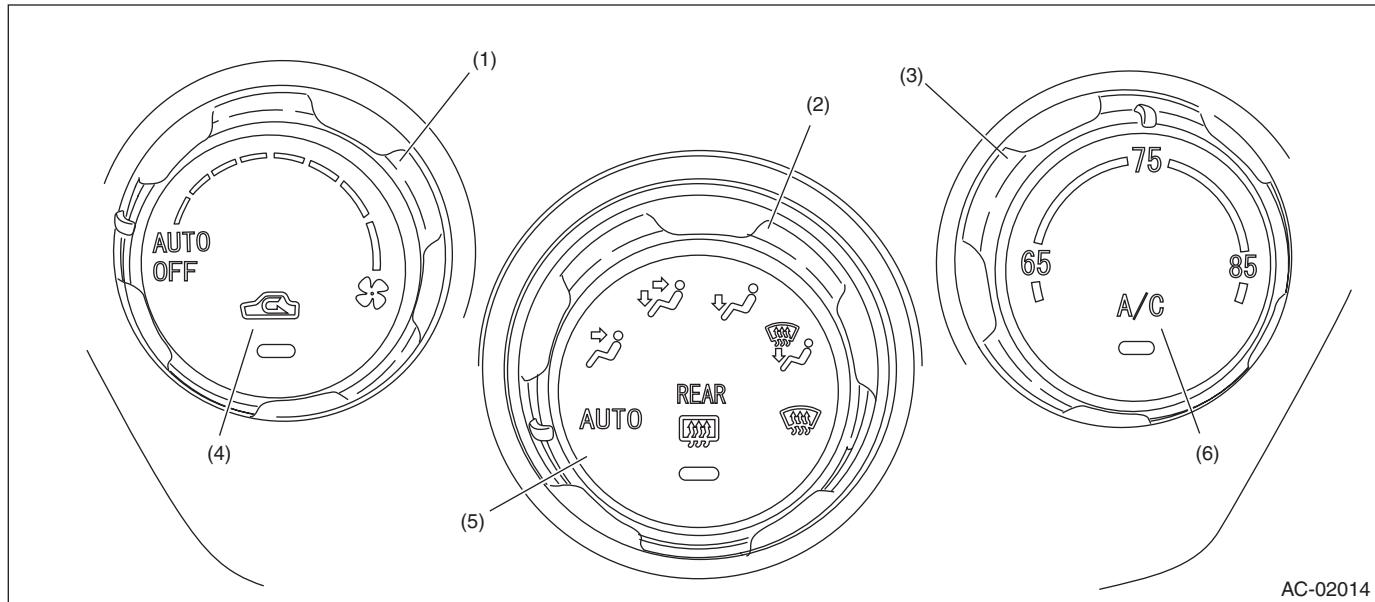

(1) Fan dial
 (2) Air flow control dial

(3) Temperature adjustment dial
 (4) FRESH/RECIRC switch

(5) Rear window defogger switch
 (6) A/C switch

1. A/C CONTROL MODULE SELF-DIAGNOSIS

Step	Check	Yes	No
1 SELECT SELF-DIAGNOSIS MODE IN THE CONTROL MODULE. 1) Set the air flow control dial and fan dial to the AUTO position. 2) Start the engine with the A/C switch and the FRESH/RECIRC switch pressed.	Does the self-diagnosis mode operate?	Go to step 2.	<Ref. to AC(diag)-13, A/C OR SELF-DIAGNOSIS SYSTEMS DO NOT OPERATE, Diagnostics for A/C System Malfunction.>
2 CHECK THE LIGHTING OF THE LED. Make sure that all switch LEDs on the control module illuminate.	Do all LEDs blink eight times?	Go to step 3.	Replace the control module.
3 CHECK SENSOR MALFUNCTION. 1) Set the air flow control dial and fan dial to the AUTO position. 2) If the system has trouble for each sensor, the FRESH/RECIRC switch LED blinks or is turned off. 3) If the system has no malfunctions, the FRESH/RECIRC switch LED is illuminated.	Does the FRESH/RECIRC switch LED illuminate?	Go to step 5.	Go to step 4.
4 CONFIRM MALFUNCTIONING SENSOR. 1) Set the air flow control dial to AUTO. 2) Turn the fan dial to each mode position, and check each switch LED illumination according to sensor check table. <Ref. to AC(diag)-11, SENSOR CHECK TABLE, OPERATION, Diagnostic Chart for Self-Diagnosis.>	When turning the fan dial to each mode position, does the FRESH/RECIRC switch LED go off?	Go to step 5.	Repair the defective sensor. <Ref. to AC(diag)-29, Diagnostic Procedure for Sensors.>

Diagnostic Chart for Self-Diagnosis

HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS)

Step	Check	Yes	No
5 CHECK AIR MIX DOOR AND MODE DOOR POSITION SIGNALS.	Does the FRESH/RECIRC switch LED illuminate?	Go to step 8 .	Go to step 6 .
6 CHECK AIR MIX DOOR POSITION DRIVE SIGNALS.	Do the LEDs illuminate in accordance with operation signal table?	Go to step 7 .	Check the air mix door actuator circuit. <Ref. to AC(diag)-27, AIR MIX DOOR ACTUATOR, Diagnostic Procedure for Actuators.>
7 CHECK MODE DOOR POSITION DRIVE SIGNAL.	Do the LEDs illuminate in accordance with operation signal table?	Go to step 8 .	Check the mode door actuator circuit. <Ref. to AC(diag)-25, MODE DOOR ACTUATOR, Diagnostic Procedure for Actuators.>
8 CHECK OPERATION OF EACH ACTUATOR, BLOWER FAN AND COMPRESSOR CLUTCH.	Does the operation of each mode match to operating mode table?	Turn the fan dial to OFF or the ignition switch to OFF in order to complete self-diagnosis.	Repair the malfunctioning part in accordance with each diagnostic chart.

Diagnostic Chart for Self-Diagnosis

HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS)

2. SENSOR CHECK TABLE

NOTE:

- When the sunload sensor check is performed indoors or in the shade, it could be diagnosed as having an open circuit. Always check the sunload sensor at a location exposed to direct sunlight.
- LED illuminates to warn the past malfunction if it was detected four times or more in the past.
- To clear the past malfunction, disconnect the ground cable from the battery, or press and hold the FRESH/RECIRC switch for five seconds or more when performing the self-diagnosis Step 3 to Step 7.

Air flow control dial position	Fan dial position	Sensor	No trouble	Short circuit	Open circuit	When currently malfunctioning	When having malfunctioned in the past
AUTO	AUTO	In-vehicle sensor	FRESH/RECIRC switch LED is turned off	FRESH/RECIRC switch LED blinks (Illuminates for 0.2 sec. ↔ turns off for 0.2 sec.)	FRESH/RECIRC switch LED blinks (Illuminates for 0.2 sec. ↔ turns off for 0.2 sec.)	Rear window defogger switch LED is turned off	Rear window defogger switch LED illuminates
	1st	Ambient sensor		FRESH/RECIRC switch LED blinks (Illuminates for 0.2 sec. ↔ turns off for 0.2 sec.)			
	2nd	Evaporator sensor		FRESH/RECIRC switch LED blinks (Illuminates for 0.2 sec. ↔ turns off for 0.2 sec.)			
	3rd	Engine coolant temperature sensor		—			
	4th	Sunload sensor		FRESH/RECIRC switch LED blinks (Illuminates for 0.2 sec. ↔ turns off for 0.2 sec.)			
	5th — 7th	CAN communication		—			

Diagnostic Chart for Self-Diagnosis

HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS)

3. OPERATING MODE TABLE

Operation	Fan dial position							
	AUTO	1st	2nd	3rd	4th	5th	6th	7th
Blower fan	4 V	4 V	4.9 V	5.9 V	7.0 V	8.3 V	9.8 V	14 V
FRESH/RECIRC door	RECIRC	RECIRC	MIX	FRESH	FRESH	FRESH	FRESH	FRESH
Air flow control door	FACE	FACE	FACE	B/L	HEAT	HEAT	D/H	DEF
Air mix door	0%	0%	0%	50%	50%	100%	100%	100%
A/C compressor	OFF	ON	ON	ON	ON	ON	ON	ON

4. DRIVE SIGNAL CHECK TABLE

NOTE:

- LED illuminates to warn the past malfunction if it was detected four times or more in the past.
- To clear the past malfunction, disconnect the ground cable from the battery, or press and hold the FRESH/RECIRC switch for five seconds or more when performing the self-diagnosis Step 3 to Step 7.

Air flow control dial position	Fan dial position	Drive signal to check	A/C switch LED	No trouble	Short circuit	Open circuit	When currently malfunctioning	When having malfunctioned in the past					
FACE	AUTO	MIX #1	Blinking (Illuminates for 0.2 sec. ↔ turns off for 0.2 sec.)	FRESH/RECIRC switch LED is turned off	FRESH/RECIRC switch LED blinks (Illuminates for 0.2 sec. ↔ turns off for 0.2 sec.)	FRESH/RECIRC switch LED blinks (Illuminates for 1 sec. ↔ turns off for 1 sec.)	Rear window defogger switch LED is turned off	Rear window defogger switch LED illuminates					
	1st	MIX #2											
	2nd	MIX #3											
	3rd — 7th	MIX #4											
	AUTO	MODE #1	Blinking (Illuminates for 1 sec. ↔ turns off for 1 sec.)										
	1st	MODE #2											
	2nd	MODE #3											
	3rd — 7th	MODE #4											