

# General Description

## MECHANICAL

### 1. General Description

#### A: SPECIFICATION

Engine	Model			2.5 L	
	Cylinder arrangement			Horizontally opposed, liquid cooled, 4-cylinder, 4-stroke gasoline engine	
	Valve system mechanism			Belt driven, double overhead camshaft, 4-valve/cylinder	
	Bore x Stroke		mm (in)	99.5 x 79.0 (3.92 x 3.11)	
	Displacement		cm <sup>3</sup> (cu in)	2,457 (149.94)	
	Compression ratio			8.2	
	Compression pressure (at 200 — 300 rpm)	kPa (kg/cm <sup>2</sup> , psi)	Standard	981 — 1,177 (10 — 12, 142 — 171)	
	Number of piston rings			Pressure ring: 2, Oil ring: 1	
	Intake valve timing	Open	Max. retard	ATDC 5°	
			Min. advance	BTDC 25°	
		Close	Max. retard	ABDC 65°	
			Min. advance	ABDC 35°	
	Exhaust valve timing	Open	Max. retard	BBDC 32°	
			Min. advance	BBDC 72°	
		Close	Max. retard	ATDC 28°	
			Min. advance	BTDC 12°	
	Valve clearance mm (in)	Inspection value	Intake	0.20 <sup>+0.04</sup> <sub>-0.06</sub> (0.0079 <sup>+0.0016</sup> <sub>-0.0024</sub> )	
			Exhaust	0.35 <sup>±0.05</sup> (0.0138 <sup>±0.0020</sup> )	
		Adjustment value	Intake	0.20 <sup>+0.01</sup> <sub>-0.03</sub> (0.0079 <sup>+0.0004</sup> <sub>-0.0012</sub> )	
			Exhaust	0.35 <sup>±0.02</sup> (0.0138 <sup>±0.0008</sup> )	
	Idle speed (Gear shift lever is in neutral)		rpm	No load Standard 700 <sup>±100</sup>	
			A/C ON	Standard 750 <sup>±100</sup>	
	Ignition order			1 → 3 → 2 → 4	
	Ignition timing		BTDC/rpm	Standard 15° <sup>±10°</sup> /700	

# General Description

MECHANICAL

**NOTE:**

OS: Oversize US: Undersize

Belt tension adjuster	Adjuster rod protrusion amount mm (in)			5.2 — 6.2 (0.205 — 0.244)	
Camshaft	Bending limit mm (in)			0.020 (0.00079)	
	Cam lobe height mm (in)	Intake	Standard	46.55 — 46.65 (1.833 — 1.837)	
		Exhaust	Standard	46.75 — 46.85 (1.841 — 1.844)	
	Cam base circle diameter mm (in)		Standard	37.0 (1.457)	
	Journal O.D. mm (in)	Front	Standard	37.946 — 37.963 (1.4939 — 1.4946)	
		Center, rear	Standard	29.946 — 29.963 (1.1790 — 1.1796)	
	Oil clearance mm (in)		Standard	0.037 — 0.072 (0.0015 — 0.0028)	
	Thrust clearance mm (in)		Standard	0.068 — 0.116 (0.0027 — 0.0047)	
Cylinder head	Warping limit (Mating surface with cylinder block) mm (in)			0.035 (0.0014)	
	Grinding limit mm (in)			0.3 (0.012)	
	Standard height mm (in)			127.5 (5.02)	
Valve seat	Seating angle between valve and valve seat mm (in)			90°	
	Contacting width between valve and valve seat mm (in)	Intake	Standard	0.6 — 1.4 (0.024 — 0.055)	
		Exhaust	Standard	1.2 — 1.8 (0.047 — 0.071)	
Valve guide	Clearance between the valve guide and valve stem mm (in)	Intake	Standard	0.030 — 0.057 (0.0012 — 0.0022)	
		Exhaust	Standard	0.040 — 0.067 (0.0016 — 0.0026)	
	Inside diameter mm (in)			6.000 — 6.012 (0.2362 — 0.2367)	
	Valve stem outer diameters mm (in)	Intake	5.955 — 5.970 (0.2344 — 0.2350)		
		Exhaust	5.945 — 5.960 (0.2341 — 0.2346)		
	Valve guide protrusion amount mm (in)			15.8 — 16.2 (0.622 — 0.638)	
Valve	Head edge thickness mm (in)	Intake	Standard	1.0 — 1.4 (0.039 — 0.055)	
		Exhaust	Standard	1.3 — 1.7 (0.051 — 0.067)	
	Overall length mm (in)	Intake	104.4 (4.110)		
		Exhaust	104.65 (4.1201)		
Valve spring	Free length mm (in)			53.48 (2.106)	
	Tension/spring height N (kgf, lb)/mm (in)	Set	204.6 — 235.4 (20.86 — 24.00, 46.00 — 52.93)/36.0 (1.417)		
			Lift	363.5 — 401.7 (37.07 — 40.96, 81.73 — 90.32)/26.7 (1.051)	
	Squareness mm (in)			2.5°, 2.3 mm (0.091 in) or less	
Valve lifter	Outer diameter mm (in)			34.959 — 34.975 (1.3763 — 1.3770)	
	Valve lifter mating surface inner diameter mm (in)			34.994 — 35.016 (1.3777 — 1.3786)	
	Valve lifter and valve lifter mating surface clearance mm (in)			0.019 — 0.057 (0.0007 — 0.0022)	
Cylinder block	Warping limit (Mating surface with cylinder head) mm (in)			0.025 (0.0098)	
	Grinding limit mm (in)			0.1 (0.004)	
	Standard height mm (in)			201.0 (7.91)	
	Cylindricality mm (in)			0.015 (0.0006)	
	Out-of-roundness mm (in)			0.010 (0.0004)	
	Clearance between cylinder and piston at 20°C (68°F) mm (in)			-0.010 — 0.010 (-0.00039 — 0.00039)	
	Cylinder inner diameter boring limit (diameter) mm (in)			To 100.005 (3.9372)	

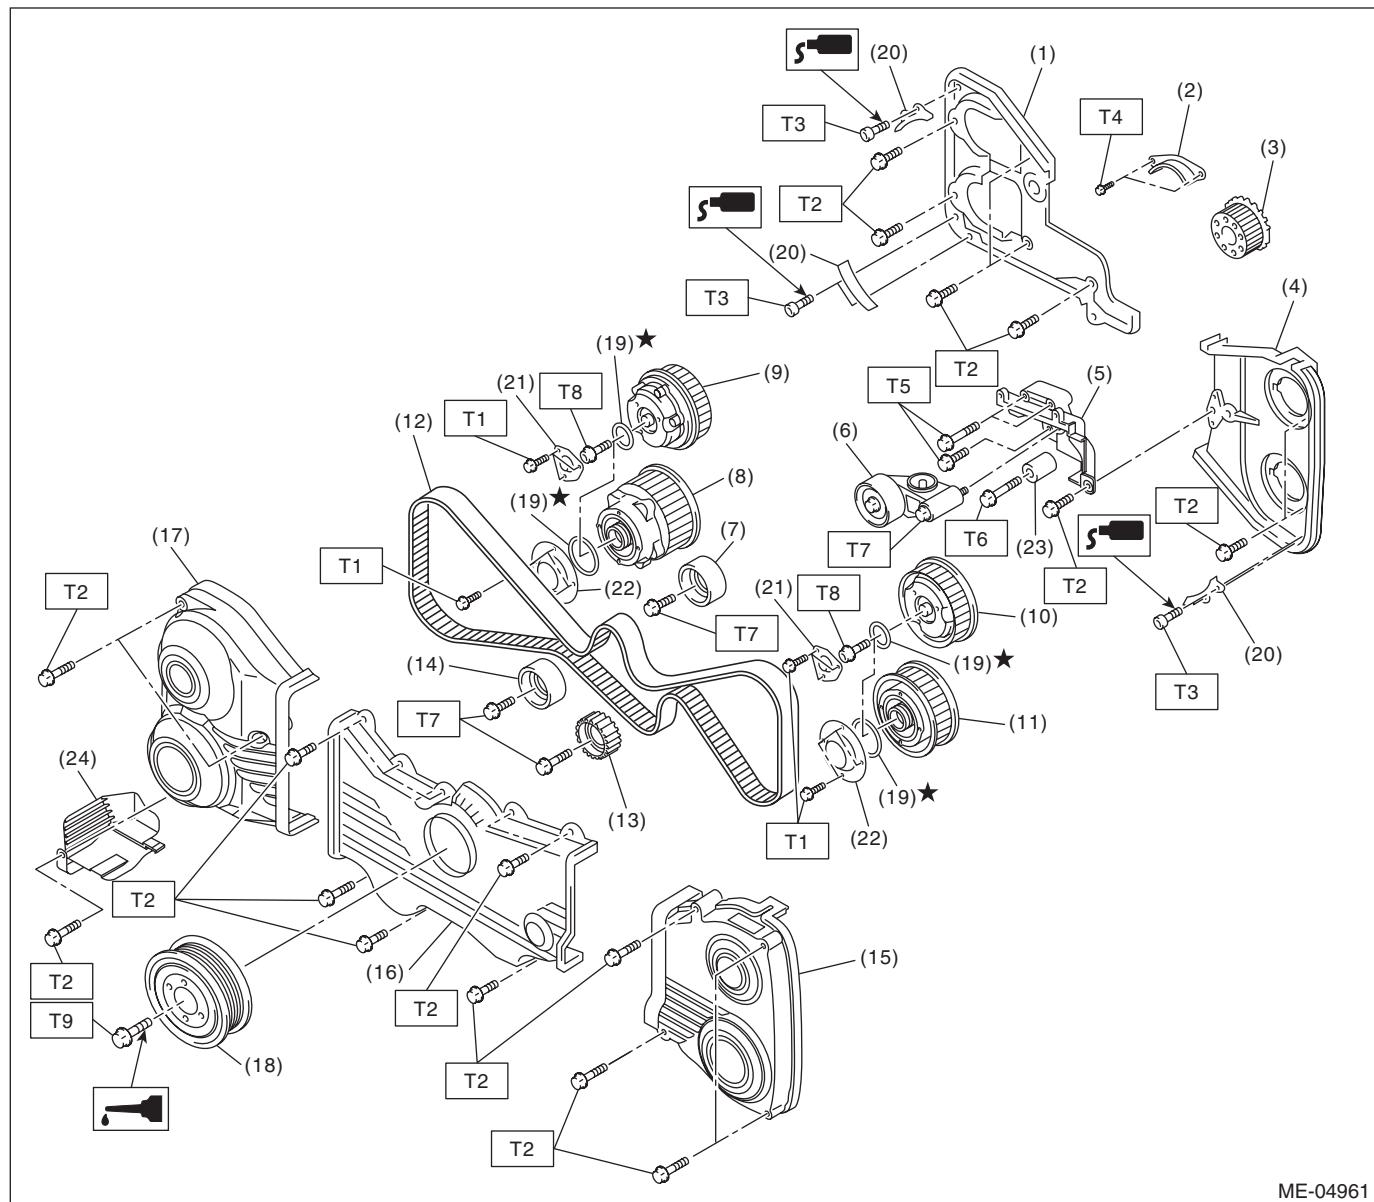
# General Description

## MECHANICAL

Piston	Piston grade point			mm (in)	38.2 (1.50)	
	Outer diameter	mm (in)	Standard	A	99.505 — 99.515 (3.9175 — 3.9179)	
				B	99.495 — 99.505 (3.9171 — 3.9175)	
			0.25 (0.0098) OS		99.745 — 99.765 (3.9270 — 3.9278)	
			0.50 (0.0197) OS		99.995 — 100.015 (3.9368 — 3.9376)	
Piston pin	Degree of fit			Piston pin must be fitted into position with thumb at 20°C (68°F).		
	Clearance between piston pin hole and piston pin			mm (in)	Standard	
Piston ring	Piston ring gap	mm (in)	Top ring	Standard	0.23 — 0.28 (0.0091 — 0.0110)	
			Second ring	Standard	0.37 — 0.52 (0.015 — 0.0203)	
			Oil ring	Standard	0.20 — 0.50 (0.0079 — 0.0197)	
	Clearance between piston ring and piston ring groove	mm (in)	Top ring	Standard	0.040 — 0.080 (0.0016 — 0.0031)	
			Second ring	Standard	0.030 — 0.070 (0.0012 — 0.0028)	
Connecting rod and connecting rod bearing	Bend or twist per 100 mm (3.94 in) in length			mm (in)	Limit	
	Thrust clearance			mm (in)	Standard	
	Oil clearance			mm (in)	Standard	
	Bearing size (Thickness at center)	mm (in)	Standard		1.490 — 1.506 (0.0587 — 0.0593)	
			0.03 (0.0012) US		1.504 — 1.512 (0.0592 — 0.0595)	
			0.05 (0.0020) US		1.514 — 1.522 (0.0596 — 0.0599)	
			0.25 (0.0098) US		1.614 — 1.622 (0.0635 — 0.0639)	
Bushing of small end	Clearance between piston pin and bushing			mm (in)	Standard	
Crankshaft and crankshaft bearing	Bending limit			mm (in)	0.035 (0.0014)	
	Crank pin	mm (in)	Cylindricality	mm (in)	Limit	
			Out-of-roundness	mm (in)	Limit	
			Grinding limit (dia.)		To 51.750 (2.0374)	
	Crank journal	mm (in)	Cylindricality	mm (in)	Limit	
			Out-of-roundness	mm (in)	Limit	
			Grinding limit (dia.)		To 59.758 (2.3527)	
	Crank pin outer diameter	mm (in)	Standard		51.976 — 52.000 (2.0463 — 2.0472)	
			0.03 (0.0012) US		51.954 — 51.970 (2.0454 — 2.0461)	
			0.05 (0.0020) US		51.934 — 51.950 (2.0447 — 2.0453)	
			0.25 (0.0098) US		51.734 — 51.750 (2.0368 — 2.0374)	
	Crank journal outer diameter	mm (in)	Standard		59.984 — 60.008 (2.3616 — 2.3625)	
			0.03 (0.0012) US		59.962 — 59.978 (2.3607 — 2.3613)	
			0.05 (0.0020) US		59.942 — 59.958 (2.3599 — 2.3605)	
			0.25 (0.0098) US		59.742 — 59.758 (2.3520 — 2.3527)	
	Bearing size (Thickness at center)	#1, #3	Standard		1.998 — 2.015 (0.0787 — 0.0793)	
			0.03 (0.0012) US		2.017 — 2.020 (0.0794 — 0.0795)	
			0.05 (0.0020) US		2.027 — 2.030 (0.0798 — 0.0799)	
			0.25 (0.0098) US		2.127 — 2.130 (0.0837 — 0.0839)	
		#2, #4, #5	Standard		2.000 — 2.017 (0.0787 — 0.0794)	
			0.03 (0.0012) US		2.019 — 2.022 (0.0795 — 0.0796)	
			0.05 (0.0020) US		2.029 — 2.032 (0.0799 — 0.0800)	
			0.25 (0.0098) US		2.129 — 2.132 (0.0838 — 0.0839)	
	Thrust clearance			mm (in)	Standard	
	Oil clearance			mm (in)	Standard	

## **B: COMPONENT**

## 1. TIMING BELT

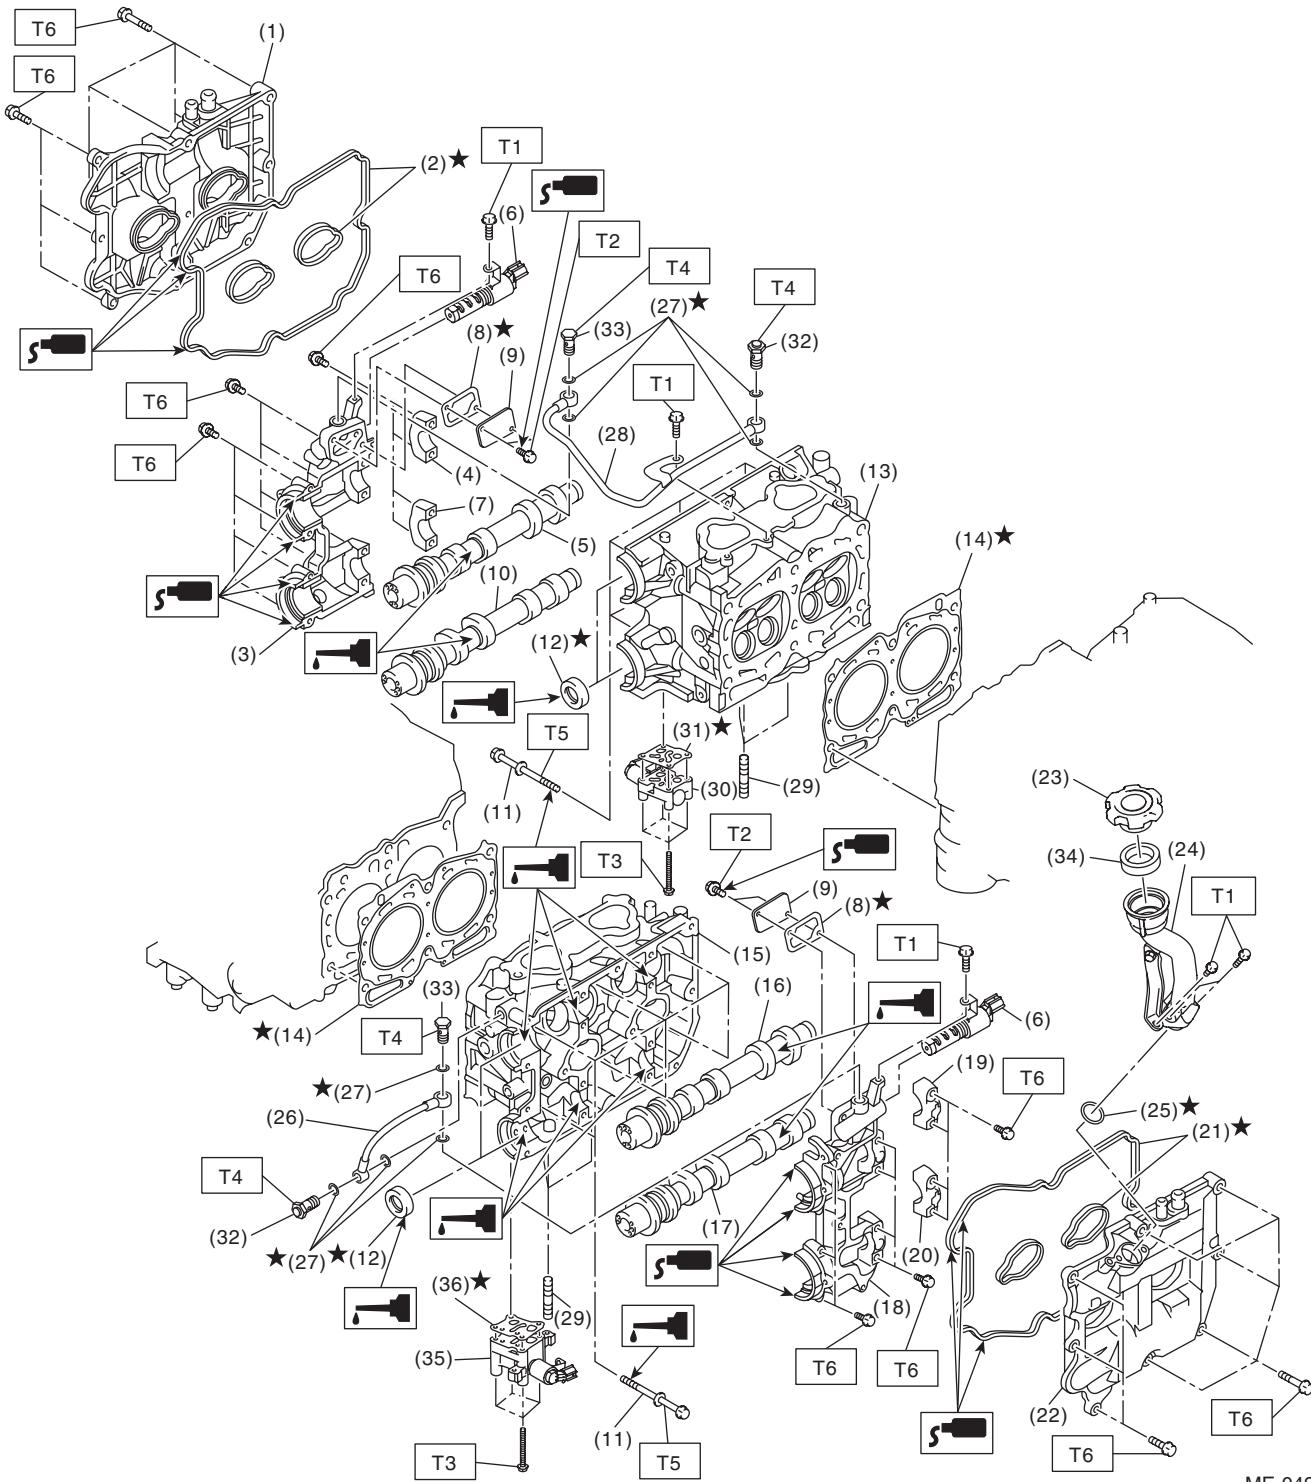


# General Description

## MECHANICAL

(1) Timing belt cover No. 2 RH	(13) Belt idler No. 2	<b>Tightening torque: N·m (kgf·m, ft-lb)</b>
(2) Timing belt guide	(14) Belt idler	<b>T1: 3.4 (0.3, 2.5)</b>
(3) Crank sprocket	(15) Timing belt cover LH	<b>T2: 5 (0.5, 3.7)</b>
(4) Timing belt cover No. 2 LH	(16) Front belt cover	<b>T3: 6.4 (0.7, 4.7)</b>
(5) Tensioner bracket	(17) Timing belt cover RH	<b>T4: 9.75 (1.0, 7.2)</b>
(6) Automatic belt tension adjuster ASSY	(18) Crank pulley	<b>T5: 24.5 (2.5, 18.1)</b>
(7) Belt idler	(19) O-ring	<b>T6: 25 (2.5, 18.4)</b>
(8) Exhaust cam sprocket RH	(20) Timing belt guide	<b>T7: 39 (4.0, 28.8)</b>
(9) Intake cam sprocket RH	(21) Intake actuator cover	<b>T8: &lt;Ref. to ME(STI)-59, INSTALLATION, Cam Sprocket.&gt;</b>
(10) Intake cam sprocket LH	(22) Exhaust actuator cover	<b>T9: &lt;Ref. to ME(STI)-47, INSTALLATION, Crank Pulley.&gt;</b>
(11) Exhaust cam sprocket LH	(23) Belt idler	
(12) Timing belt	(24) Engine harness cover	

### 2. CYLINDER HEAD AND CAMSHAFT



ME-04944

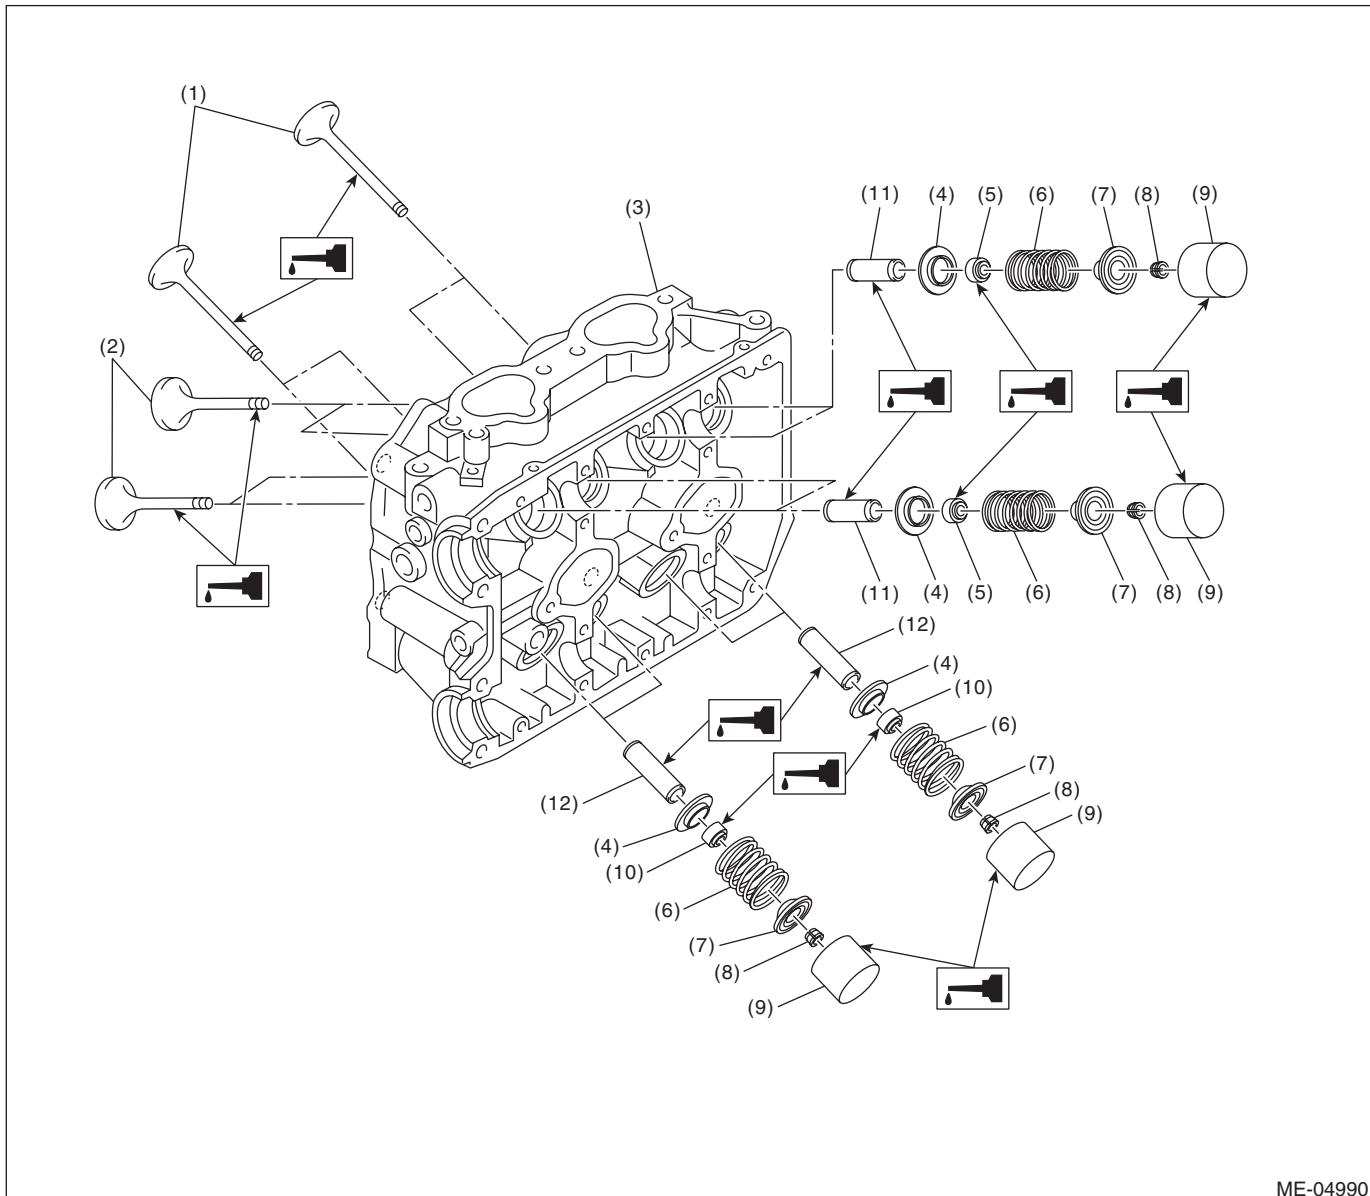
# General Description

## MECHANICAL

---

(1) Rocker cover RH	(16) Intake camshaft LH	(31) Gasket RH
(2) Rocker cover gasket RH	(17) Exhaust camshaft LH	(32) Union bolt with filter (with protrusion)
(3) Front camshaft cap RH	(18) Front camshaft cap LH	(33) Union bolt without filter (without protrusion)
(4) Intake camshaft cap RH	(19) Intake camshaft cap LH	(34) Gasket
(5) Intake camshaft RH	(20) Exhaust camshaft cap LH	(35) Exhaust oil flow control solenoid valve LH
(6) Intake oil flow control solenoid valve	(21) Rocker cover gasket LH	(36) Gasket LH
(7) Exhaust camshaft cap RH	(22) Rocker cover LH	
(8) Gasket	(23) Oil filler cap	<b>Tightening torque: N·m (kgf·m, ft·lb)</b>
(9) Oil return cover	(24) Oil filler duct	<b>T1: 6.4 (0.7, 4.7)</b>
(10) Exhaust camshaft RH	(25) O-ring	<b>T2: 9 (0.9, 6.6)</b>
(11) Cylinder head bolt	(26) Oil pipe LH	<b>T3: 10 (1.0, 7.4)</b>
(12) Oil seal	(27) Gasket	<b>T4: 29 (3.0, 21.4)</b>
(13) Cylinder head RH	(28) Oil pipe RH	<b>T5: &lt;Ref. to ME(STI)-70, INSTALLATION, Cylinder Head.&gt;</b>
(14) Cylinder head gasket	(29) Stud bolt	<b>T6: &lt;Ref. to ME(STI)-64, INSTALLATION, Camshaft.&gt;</b>
(15) Cylinder head LH	(30) Exhaust oil flow control solenoid valve RH	

## 3. CYLINDER HEAD AND VALVE ASSEMBLY



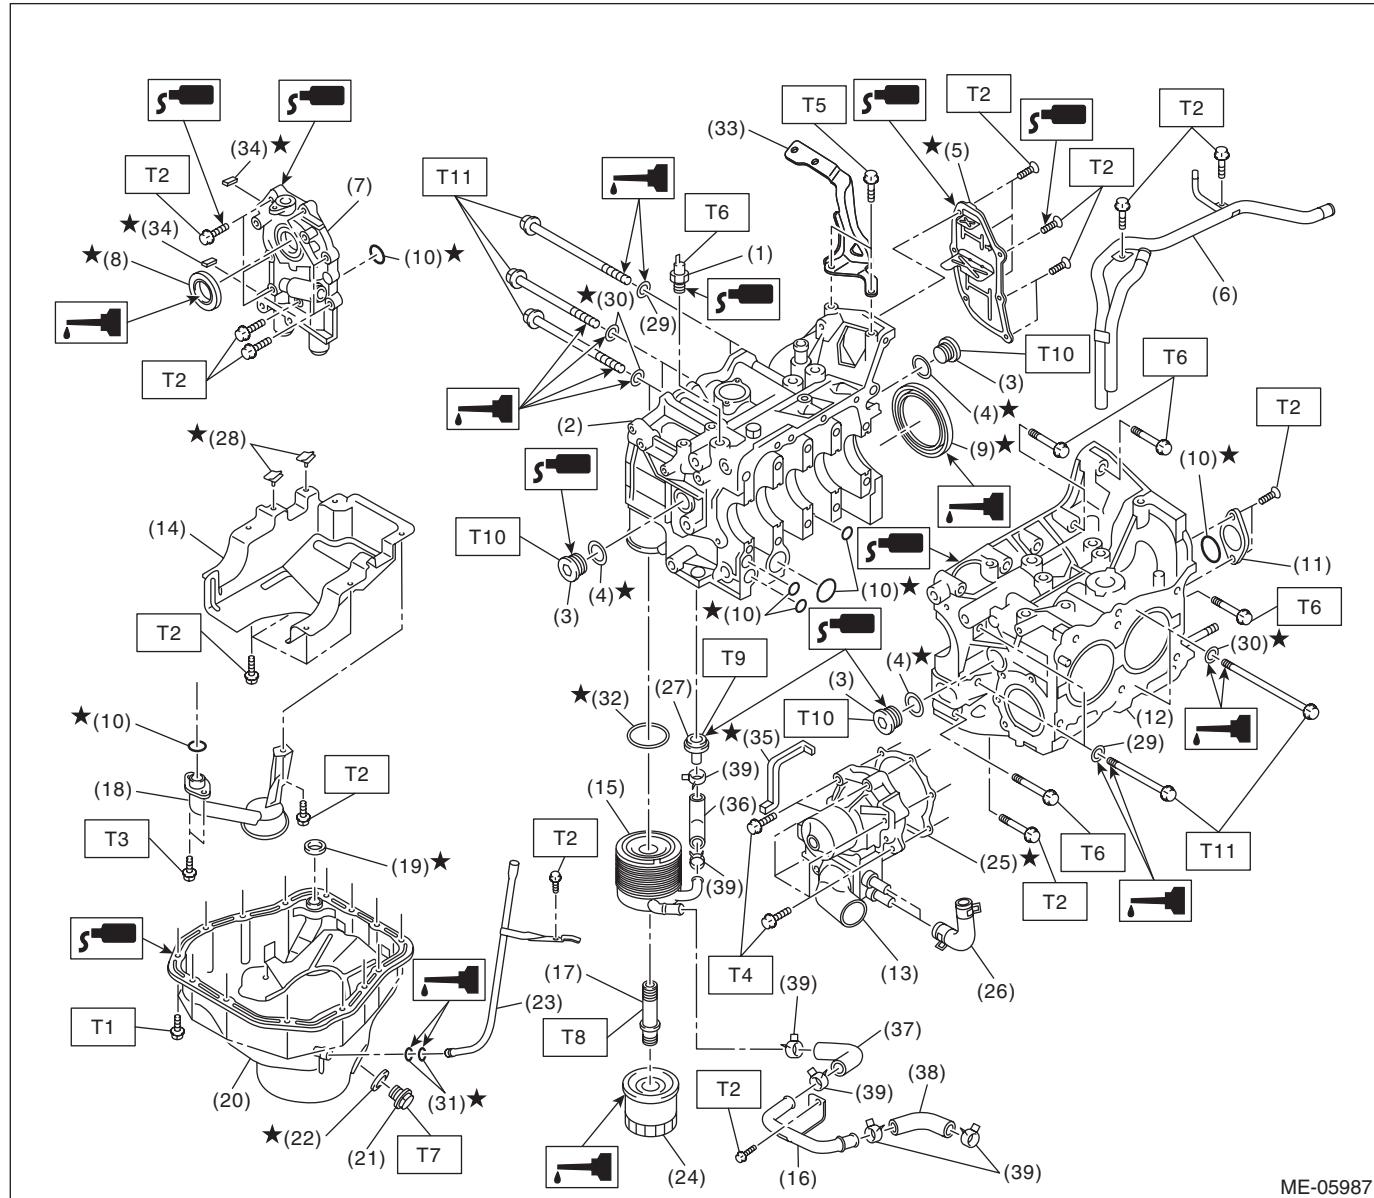
ME-04990

(1) Exhaust valve	(5) Intake valve oil seal	(9) Valve lifter
(2) Intake valve	(6) Valve spring	(10) Exhaust valve oil seal
(3) Cylinder head	(7) Valve spring retainer	(11) Intake valve guide
(4) Valve spring seat	(8) Valve spring retainer key	(12) Exhaust valve guide

# General Description

## MECHANICAL

### 4. CYLINDER BLOCK



# General Description

MECHANICAL

---

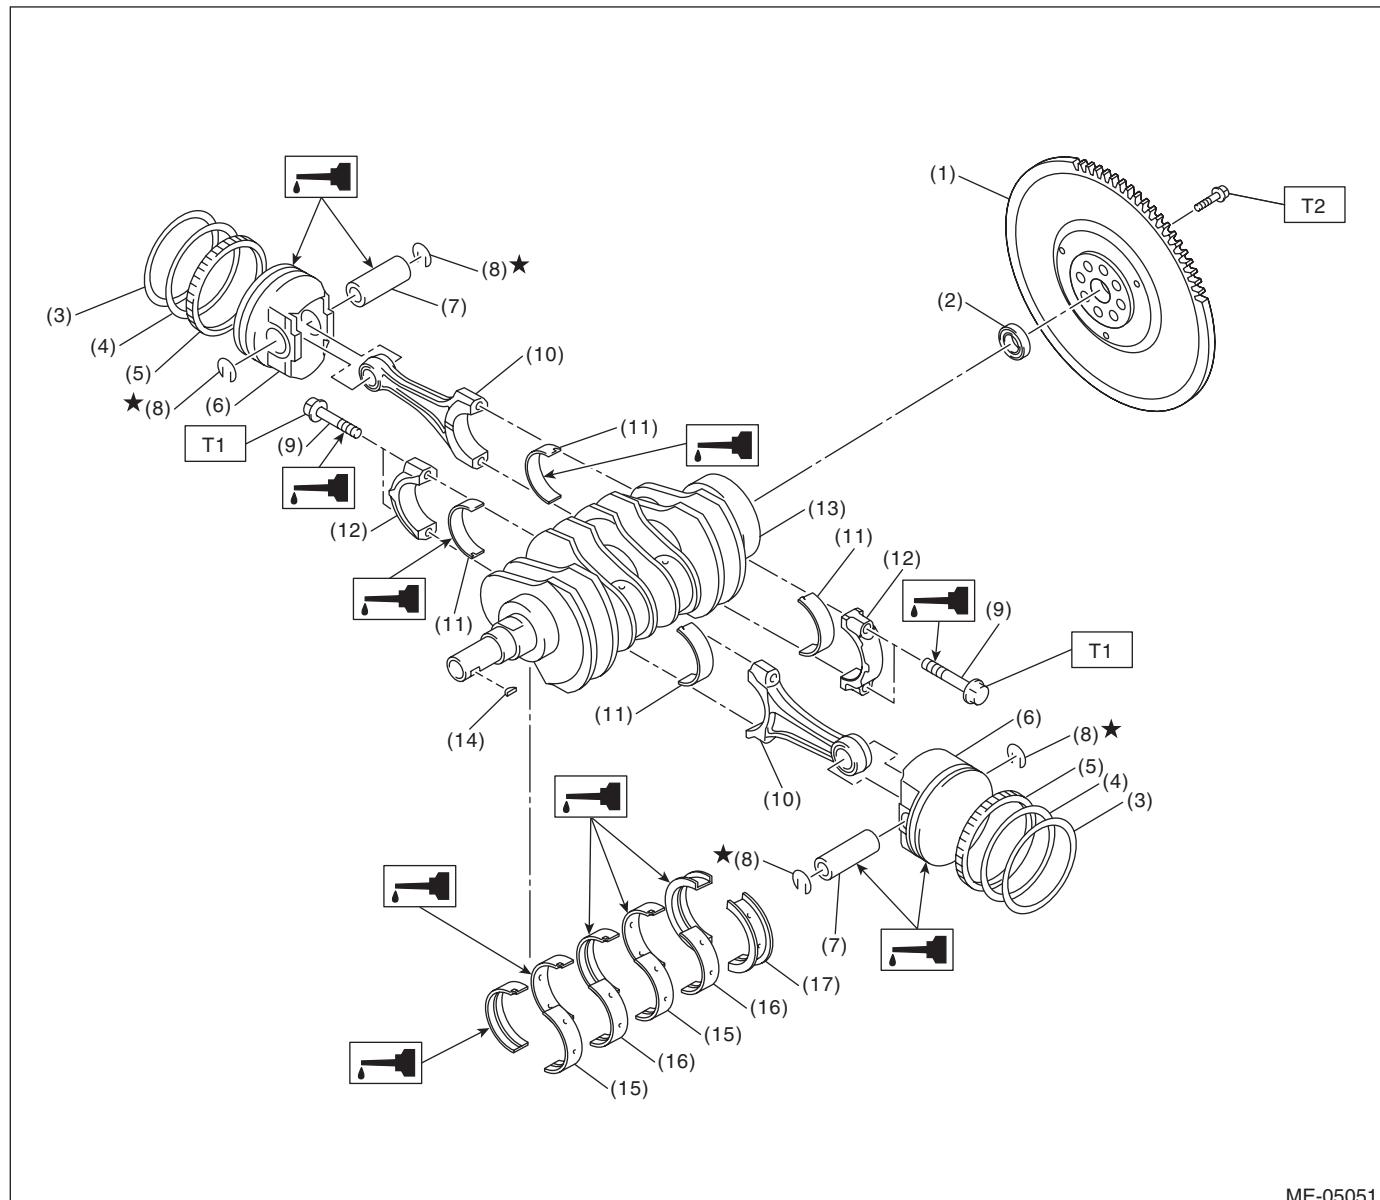
(1) Oil pressure switch	(19) Gasket	(37) Oil cooler hose B
(2) Cylinder block RH	(20) Oil pan	(38) Oil cooler hose C
(3) Service hole plug	(21) Drain plug	(39) Clip
(4) Gasket	(22) Drain plug gasket	
(5) Oil separator cover	(23) Oil level gauge guide	<b>Tightening torque: N·m (kgf·m, ft·lb)</b>
(6) Water by-pass pipe	(24) Oil filter	<b>T1: 5 (0.5, 3.7)</b>
(7) Oil pump	(25) Gasket	<b>T2: 6.4 (0.7, 4.7)</b>
(8) Front oil seal	(26) Water pump hose	<b>T3: 10 (1.0, 7.4)</b>
(9) Rear oil seal	(27) Nipple	<b>T4: First 12 (1.2, 8.9)</b>
(10) O-ring	(28) Seal	<b>Second 12 (1.2, 8.9)</b>
(11) Service hole cover	(29) Washer	<b>T5: 16 (1.6, 11.8)</b>
(12) Cylinder block LH	(30) Seal washer	<b>T6: 25 (2.5, 18.4)</b>
(13) Water pump	(31) O-ring	<b>T7: 44 (4.5, 32.5)</b>
(14) Baffle plate	(32) Gasket	<b>T8: 54 (5.5, 39.8)</b>
(15) Oil cooler	(33) Intercooler stay (engine rear hanger)	<b>T9: 69 (7.0, 50.9)</b>
(16) Oil cooler pipe	(34) Oil pump seal	<b>T10: 70 (7.1, 51.6)</b>
(17) Connector	(35) Water pump sealing	<b>T11: &lt;Ref. to ME(STI)-84, INSTALLATION, Cylinder Block.&gt;</b>
(18) Oil strainer	(36) Oil cooler hose A	

---

# General Description

## MECHANICAL

### 5. CRANKSHAFT AND PISTON



ME-05051

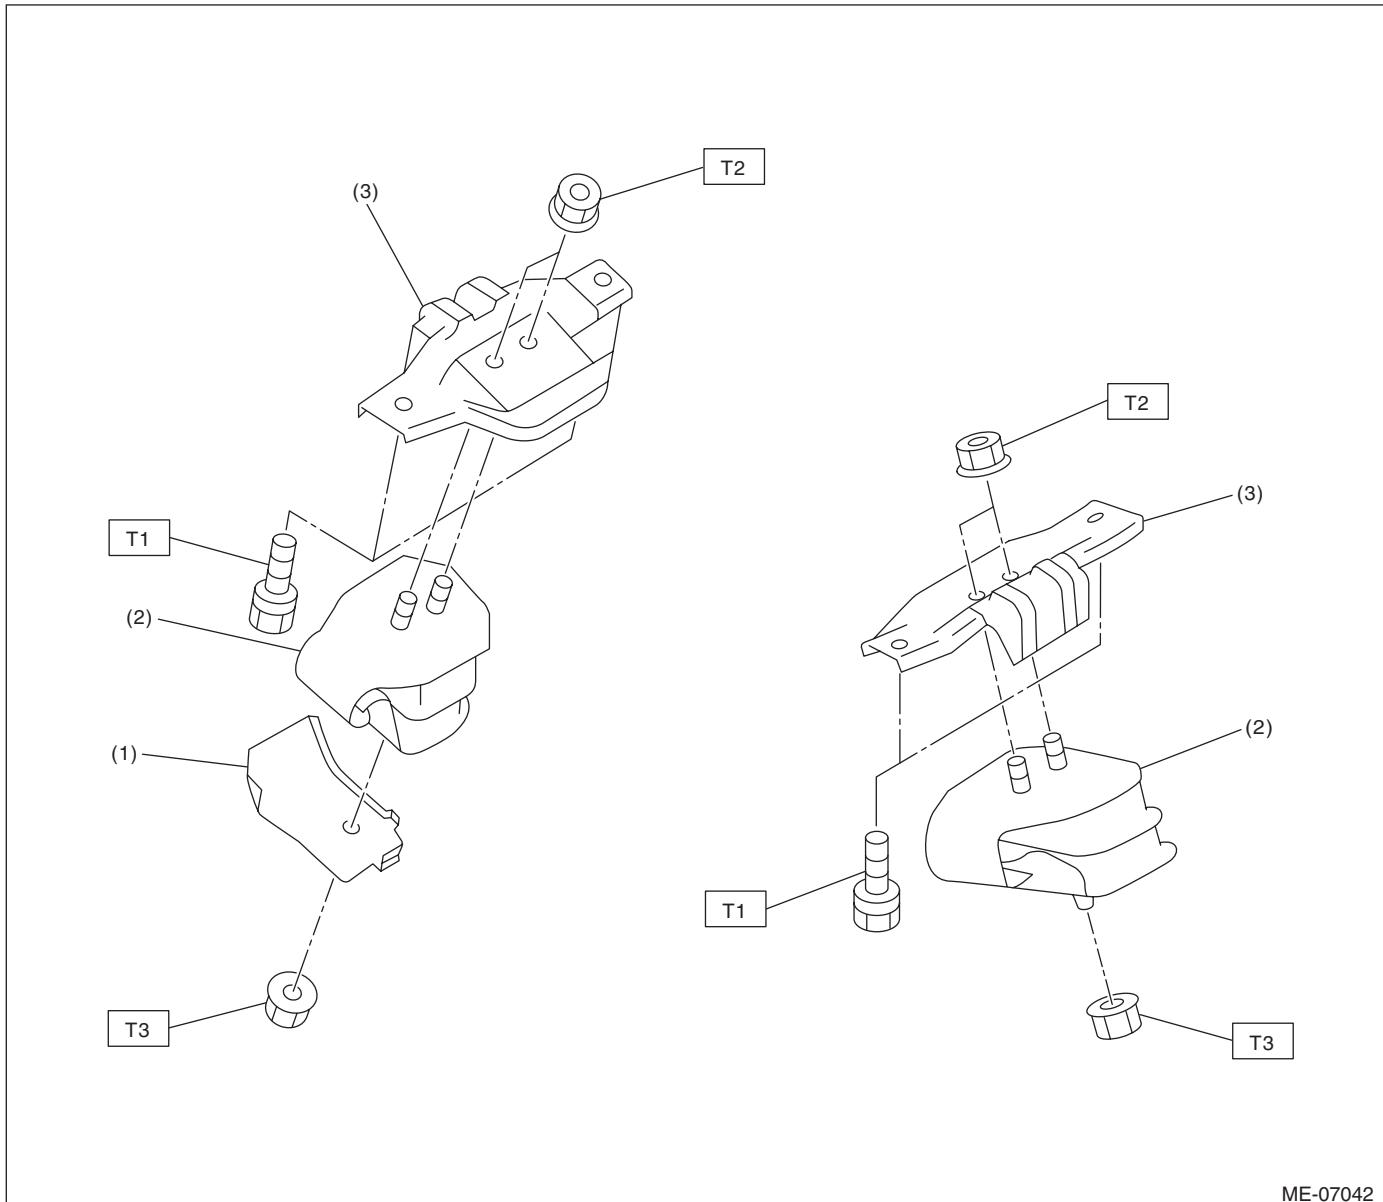
(1) Flywheel	(8) Snap ring	(15) Crankshaft bearing #1, #3
(2) Ball bearing	(9) Connecting rod bolt	(16) Crankshaft bearing #2, #4
(3) Top ring	(10) Connecting rod	(17) Crankshaft bearing #5
(4) Second ring	(11) Connecting rod bearing	
(5) Oil ring	(12) Connecting rod cap	
(6) Piston	(13) Crankshaft	
(7) Piston pin	(14) Woodruff key	

**Tightening torque: N·m (kgf·m, ft-lb)**

**T1: 52 (5.3, 38.4)**

**T2: <Ref. to CL-14, INSTALLATION, Flywheel.>**

## 6. ENGINE MOUNTING



ME-07042

(1) Heat shield cover  
(2) Front cushion rubber

(3) Front engine mounting bracket

***Tightening torque: N·m (kgf-m, ft-lb)***

***T1: 35 (3.6, 25.8)***

***T2: 42 (4.3, 31.0)***

***T3: 45 (4.6, 33.2)***

# General Description

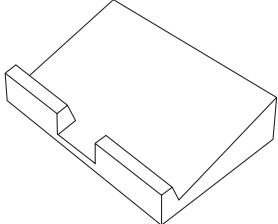
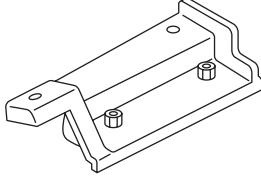
## MECHANICAL

### C: CAUTION

- Prior to starting work, pay special attention to the following:
  1. Always wear work clothes, a work cap, and protective shoes. Additionally, wear a helmet, protective goggles, etc. if necessary.
  2. Protect the vehicle using a seat cover, fender cover, etc.
  3. Prepare the service tools, clean cloth, containers to catch grease and oil, etc.
- Vehicle components are extremely hot immediately after driving. Be wary of receiving burns from heated parts.
- When performing a repair, identify the cause of trouble and avoid unnecessary removal, disassembly and replacement.
- Before disconnecting connectors of sensors or units, be sure to disconnect the ground cable from battery.
- Always use the jack-up point when the shop jacks or rigid racks are used to support the vehicle.
- Remove or install the engine in an area where chain hoists, lifting devices, etc. are available for ready use. When lifting up the vehicle, make sure to support the vehicle at the jack-up points.
- Be careful not to let any oil or grease contact the clutch disc, flywheel or timing belt.
- Remove contamination including dirt and corrosion before removal, installation, disassembly or assembly.
- Keep the removed parts in order and protect them from dust and dirt.
- All removed parts, if to be reused, should be reinstalled in the original positions with attention to the correct directions, etc.
- Rotating parts and sliding parts such as piston, bearing and gear should be coated with oil when being assembled.
- Bolts, nuts and washers should be replaced with new parts as required.
- Be sure to tighten the fasteners including bolts and nuts to the specified torque.

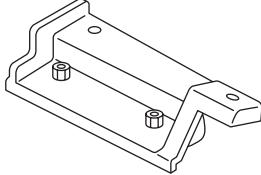
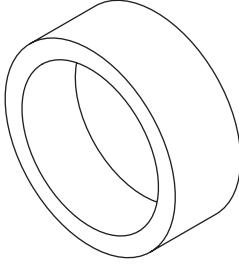
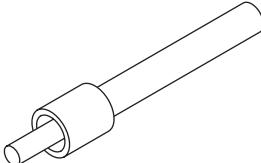
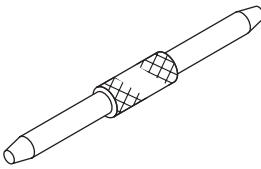
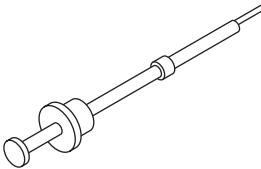
### D: PREPARATION TOOL

#### 1. SPECIAL TOOL

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST-498267600	498267600	CYLINDER HEAD TABLE	<ul style="list-style-type: none"><li>• Used for replacing valve guides.</li><li>• Used for removing and installing valve spring.</li></ul>
 ST-498457000	498457000	ENGINE STAND ADAPTER RH	Used together with ENGINE STAND (499817100).

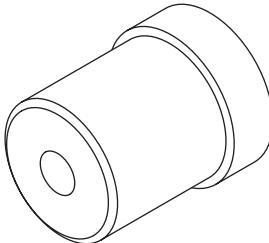
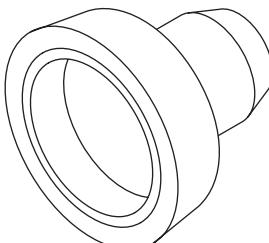
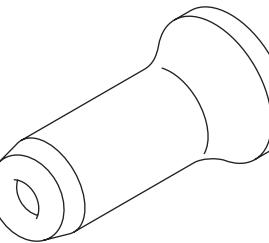
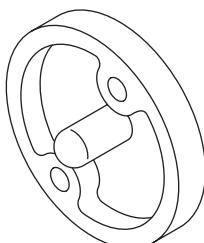
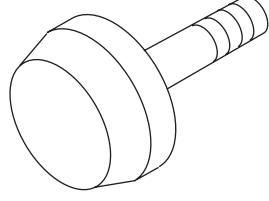
# General Description

MECHANICAL

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST-498457100	498457100	ENGINE STAND ADAPTER LH	Used together with ENGINE STAND (499817100).
 ST-498747300	498747300	PISTON GUIDE	Used for installing the piston into the cylinder.
 ST-498857100	498857100	VALVE OIL SEAL GUIDE	Used for press-fitting of intake valve guide oil seals and exhaust valve guide oil seals.
 ST-499017100	499017100	PISTON PIN GUIDE	Used for installing piston pin, piston and connecting rod.
 ST-499097700	499097700	PISTON PIN REMOVER ASSY	Used for removing piston pin.

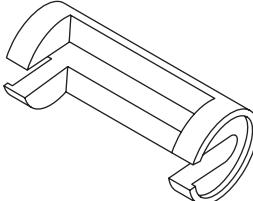
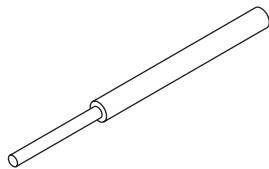
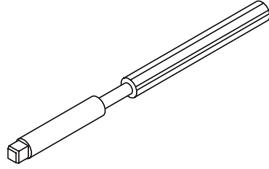
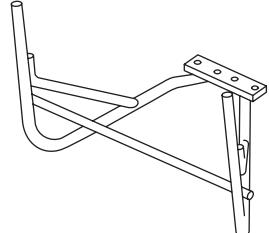
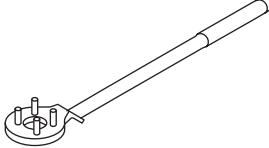
## General Description

### MECHANICAL

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST-499587100	499587100	OIL SEAL INSTALLER	Used for installing oil pump oil seal.
 ST-499587200	499587200	CRANKSHAFT OIL SEAL INSTALLER	<ul style="list-style-type: none"> <li>Used for installing crankshaft oil seal.</li> <li>Used together with CRANKSHAFT OIL SEAL GUIDE (499597100).</li> </ul>
 ST-499587600	499587600	OIL SEAL INSTALLER	Used for installing the camshaft oil seal.
 ST-499597100	499597100	CRANKSHAFT OIL SEAL GUIDE	<ul style="list-style-type: none"> <li>Used for installing crankshaft oil seal.</li> <li>Used together with CRANKSHAFT OIL SEAL INSTALLER (499587200).</li> </ul>
 ST-499597200	499597200	OIL SEAL GUIDE	<ul style="list-style-type: none"> <li>Used for installing the camshaft oil seal.</li> <li>Used together with OIL SEAL INSTALLER (499587600).</li> </ul>

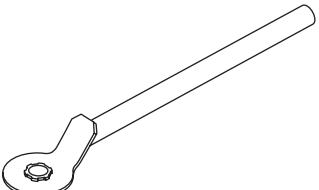
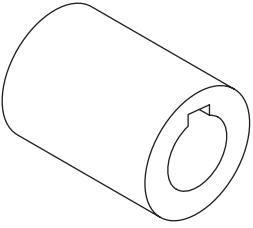
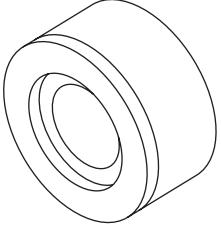
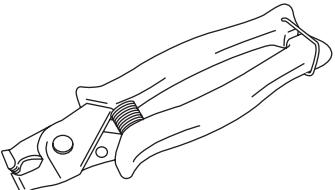
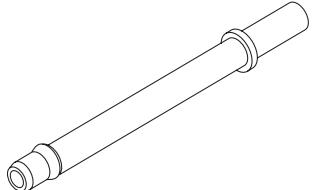
# General Description

MECHANICAL

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST-499718000	499718000	VALVE SPRING REMOVER	Used for removing and installing valve spring.
 ST-499767200	499767200	VALVE GUIDE REMOVER	Used for removing valve guides.
 ST-499767400	499767400	VALVE GUIDE REAMER	Used for reaming valve guides.
 ST-499817100	499817100	ENGINE STAND	<ul style="list-style-type: none"> <li>Used for disassembling and assembling engine.</li> <li>Used together with ENGINE STAND ADAPTER RH (498457000) &amp; LH (498457100).</li> </ul>
 ST-499977100	499977100	CRANK PULLEY WRENCH	Used for removing and installing the crank pulley.

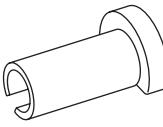
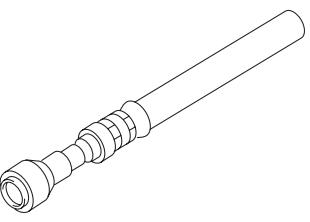
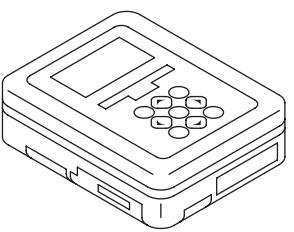
## General Description

### MECHANICAL

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST-499977500	499977500	CAM SPROCKET WRENCH	Used for removing and installing intake cam sprocket and exhaust cam sprocket.
 ST-499987500	499987500	CRANKSHAFT SOCKET	Used for rotating crankshaft.
 ST18251AA020	18251AA020	VALVE GUIDE ADJUSTER	Used for installing intake valve guides and exhaust valve guides.
 ST18353AA000	18353AA000	CLAMP PLIERS	<ul style="list-style-type: none"> <li>• Used for removing and installing the PCV hose.</li> <li>• This tool is made by the French company CAILLAU. (code) 54.0.000.205</li> </ul> <p>To make it easier to obtain, it has been provided with a tool number.</p>
 ST18471AA000	18471AA000	FUEL PIPE ADAPTER	Used for inspecting the fuel pressure.

# General Description

MECHANICAL

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
	42099AE000	QUICK CONNECTOR RELEASE	Used for removing the quick connector.
	ST42075AG690	FUEL HOSE	Used for inspecting the fuel pressure. NOTE: This is the SUBARU genuine part.
	1B022XU0	SUBARU SELECT MONITOR III KIT	Used for various inspections.

## 2. GENERAL TOOL

TOOL NAME	REMARKS
Compression gauge	Used for measuring compression.
Timing light	Used for measuring ignition timing.
Vacuum gauge	Used for measuring intake manifold vacuum.
Oil pressure gauge	Used for measuring engine oil pressure.
Fuel pressure gauge	Used for measuring fuel pressure.
Angle gauge	Used for installing the crank pulley.