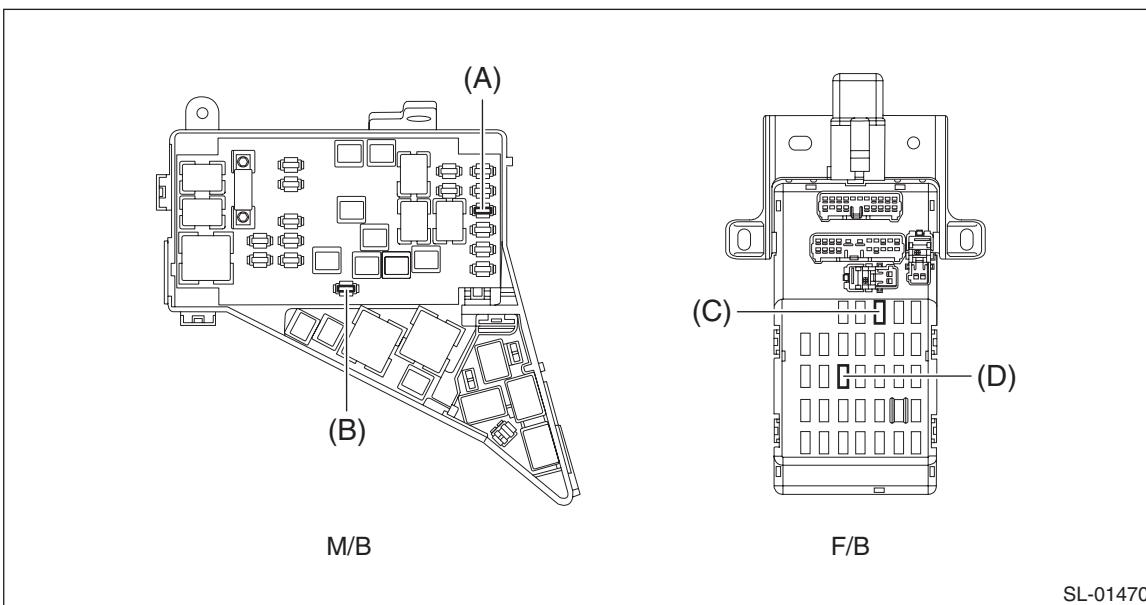


2. Relay and Fuse

A: LOCATION



Main fuse box	Fuse 15A (turn signal & hazard module, body integrated unit) Fuse 20 A (body integrated unit, immobilizer antenna)	(A) (B)
Relay & fuse box	Fuse 15 A (body integrated unit) Fuse 10 A (keyless access CM, TPMS & keyless entry CM)	(C) (D)

NOTE:

For other related fuses, refer to the wiring diagram. <Ref. to WI-28, Power Supply Circuit.>

B: INSPECTION

1. CHECK FUSE

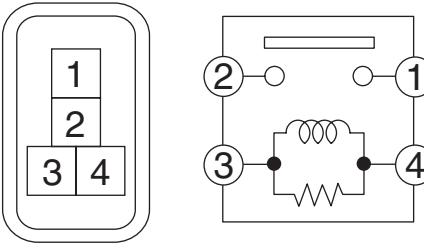
- 1) Remove the fuse and inspect visually.
- 2) If the fuse is blown out, replace the fuse.

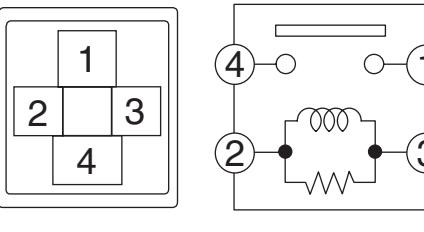
NOTE:

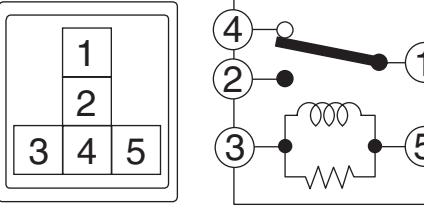
If the fuse is blown again, check the system wiring harness.

2. CHECK RELAY

1) Measure the resistance between relay terminals.

Terminal No.	Inspection conditions	Standard	Circuit
1 — 2	Always	1 MΩ or more	
1 — 2	Apply battery voltage between terminals 4 and 3.	Less than 1 Ω	 LI-01273

Terminal No.	Inspection conditions	Standard	Circuit
1 — 4	Always	1 MΩ or more	
1 — 4	Apply battery voltage between terminals 2 and 3.	Less than 1 Ω	 AC-02796

Terminal No.	Inspection conditions	Standard	Circuit
1 — 2	Always	1 MΩ or more	
1 — 4	Always	Less than 1 Ω	
1 — 2	Apply battery voltage between terminals 3 and 5.	Less than 1 Ω	 SL-01566

2) Replace the relay if the inspection result is not within the standard value.