


12. Brake Hose

A: REMOVAL

1. FRONT BRAKE HOSE



- 1) Separate the brake pipe from brake hose using a flare nut wrench.
- 2) Remove the clamp, the strut mount bolts, and union bolt.

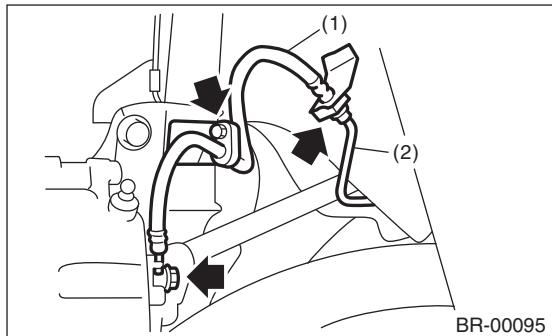

(1) Brake hose
(2) Brake pipe


2. REAR BRAKE HOSE

- 1) Remove the union bolt and brake hose bracket.

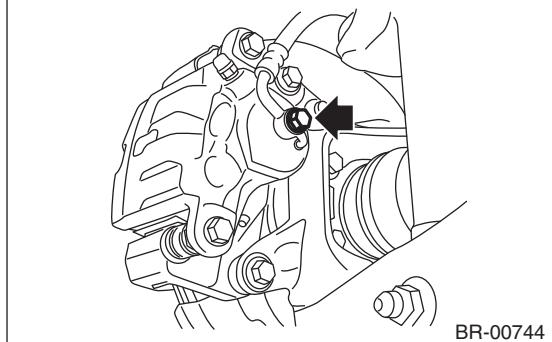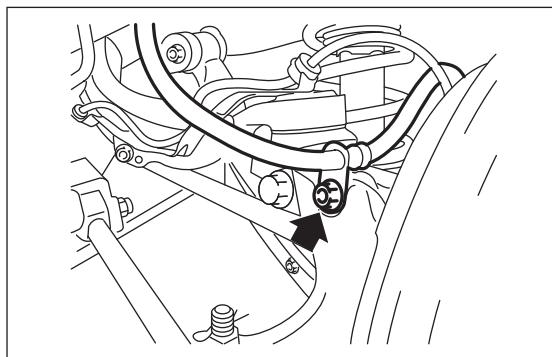

- 2) Separate the brake pipe from brake hose using a flare nut wrench.

- 3) Remove the clamp, and then remove the brake hose.

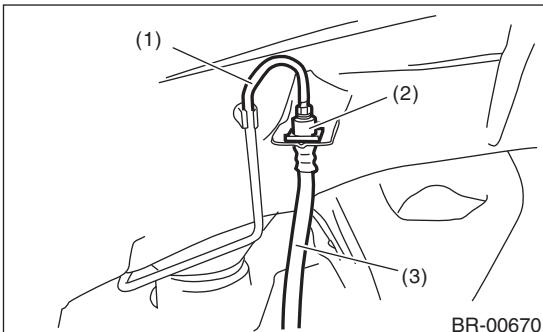

(1) Brake pipe
(2) Brake hose clamp
(3) Brake hose

B: INSTALLATION

1. FRONT BRAKE HOSE

- 1) Secure the brake hose to strut mount.

Tightening torque:

33 N·m (3.4 kgf-m, 24.3 ft-lb)

- 2) Install the brake hose to the caliper using a new gasket.

Tightening torque:

Union bolt

18 N·m (1.8 kgf-m, 13.3 ft-lb)

- 3) Position the disc in straight position and route the brake hose through the hole in the bracket on the wheel apron side.

CAUTION:

Do not twist the brake hose.

- 4) Temporarily tighten the flare nut which connects brake pipe and hose.
- 5) Secure the brake hose to wheel apron bracket with clamp.
- 6) Tighten the flare nut to the specified torque.

Tightening torque:


Brake pipe flare nut

15 N·m (1.5 kgf-m, 11.1 ft-lb)

- 7) Bleed air from the brake system.

2. REAR BRAKE HOSE

- 1) Route the brake hose through the hole of bracket, and lightly tighten the flare nut to connect brake pipe.
- 2) Insert the clamp to secure brake hose.

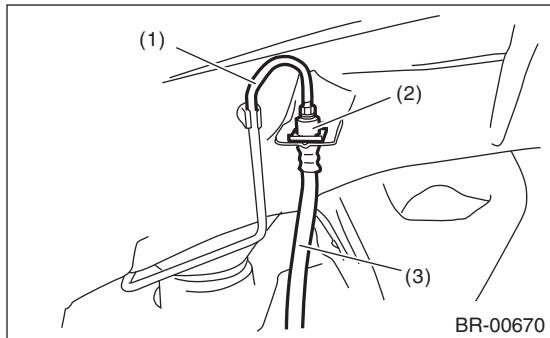

- (1) Brake pipe
- (2) Brake hose clamp
- (3) Brake hose

- 3) Install the brake hose to rear brake caliper using a new gasket.


Tightening torque:

Union bolt

18 N·m (1.8 kgf-m, 13.3 ft-lb)

Frame hose bracket

33 N·m (3.4 kgf-m, 24.3 ft-lb)

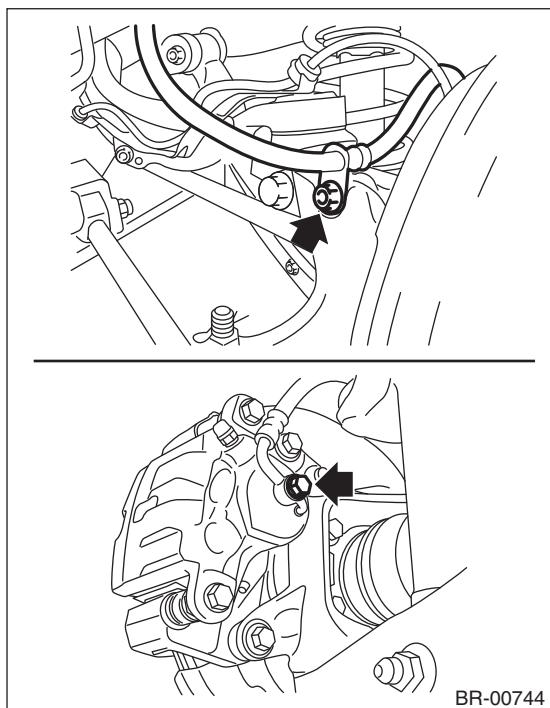

- 4) Tighten the flare nut to the specified torque.

Tightening torque:

Brake pipe flare nut

15 N·m (1.5 kgf-m, 11.1 ft-lb)

- 5) Bleed air from the brake system.

C: INSPECTION

Make sure there are no cracks, breakage or damage on hoses. Check the joint for fluid leakage. If any cracks, breakage, damage or fluid leakage is found, repair or replace the hose.