

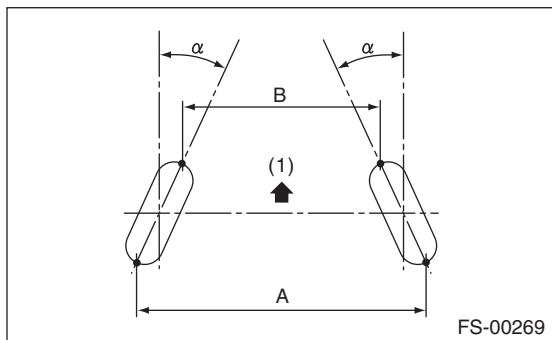
## 1. General Description

### A: SPECIFICATION

Refer to "FS" section for rear suspension specifications. <Ref. to FS-2, SPECIFICATION, General Description.>

NOTE:

- Front and rear toe-in and front camber can be adjusted. Adjust if the toe-in or camber tolerance exceeds specifications.
- For other items indicated in the specifications table, there is no adjustment mechanism. If other items exceed specifications, check the suspension parts and connections for deformation, and replace the parts if defective.



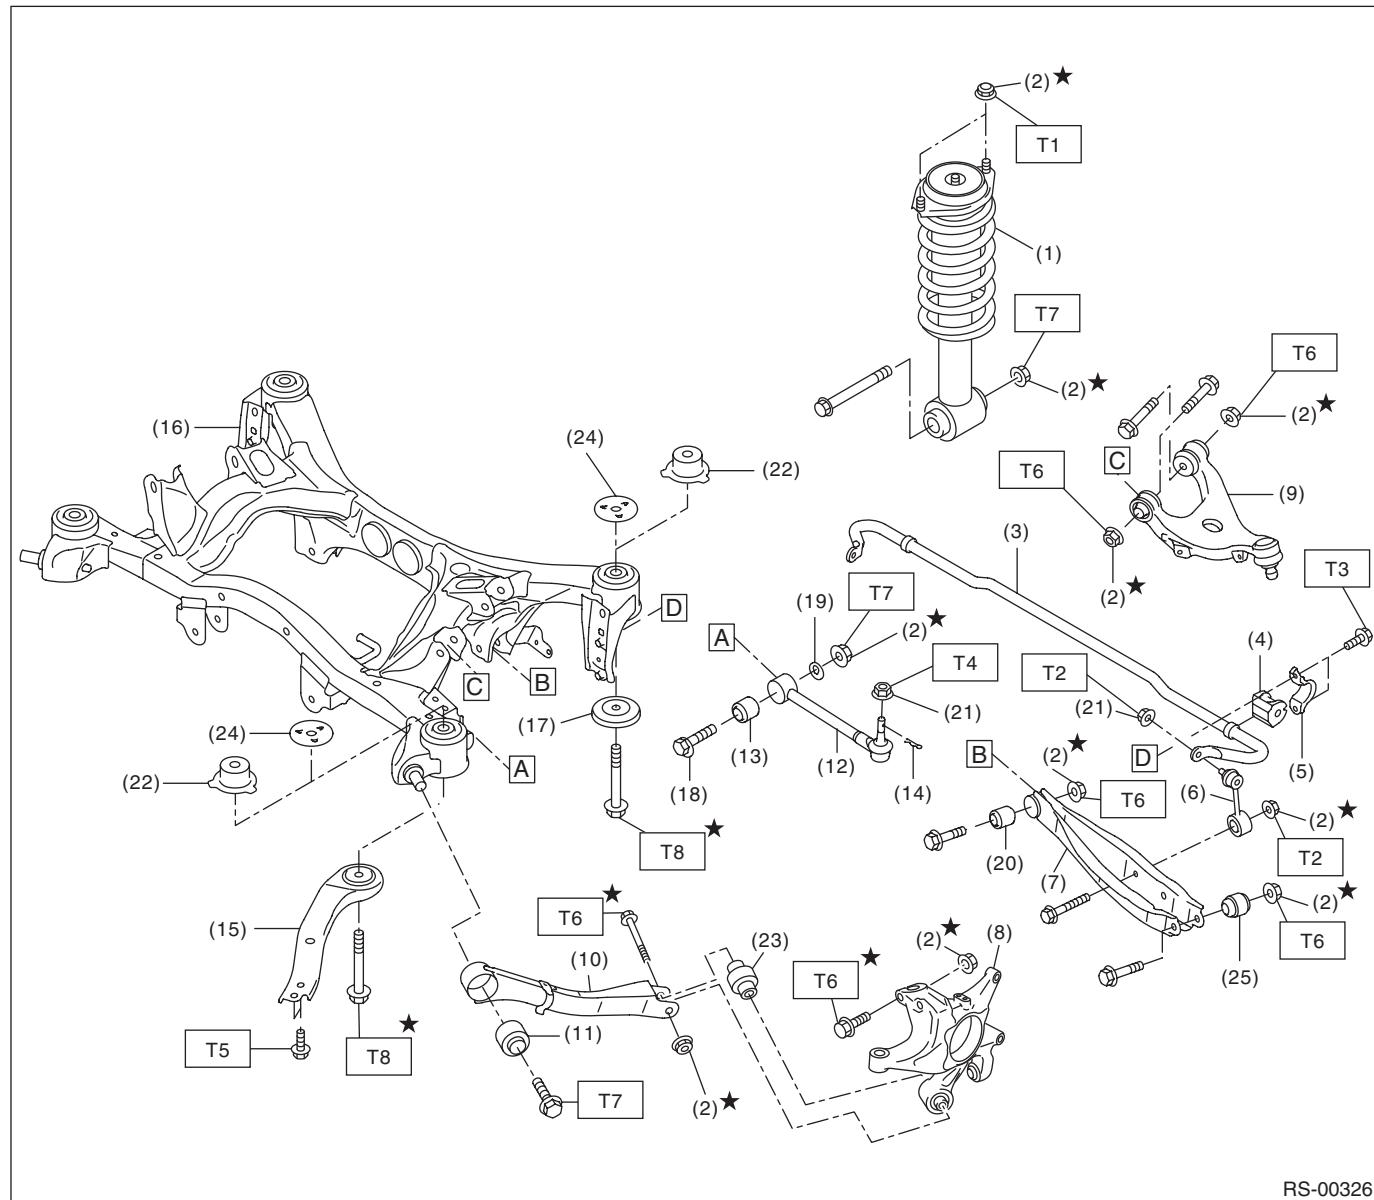
(1) Front

$A - B$  = Positive: Toe-in, Negative: Toe-out

$\alpha$  = Individual toe angles

### B: COMPONENT

#### 1. REAR SUSPENSION



RS-00326

# General Description

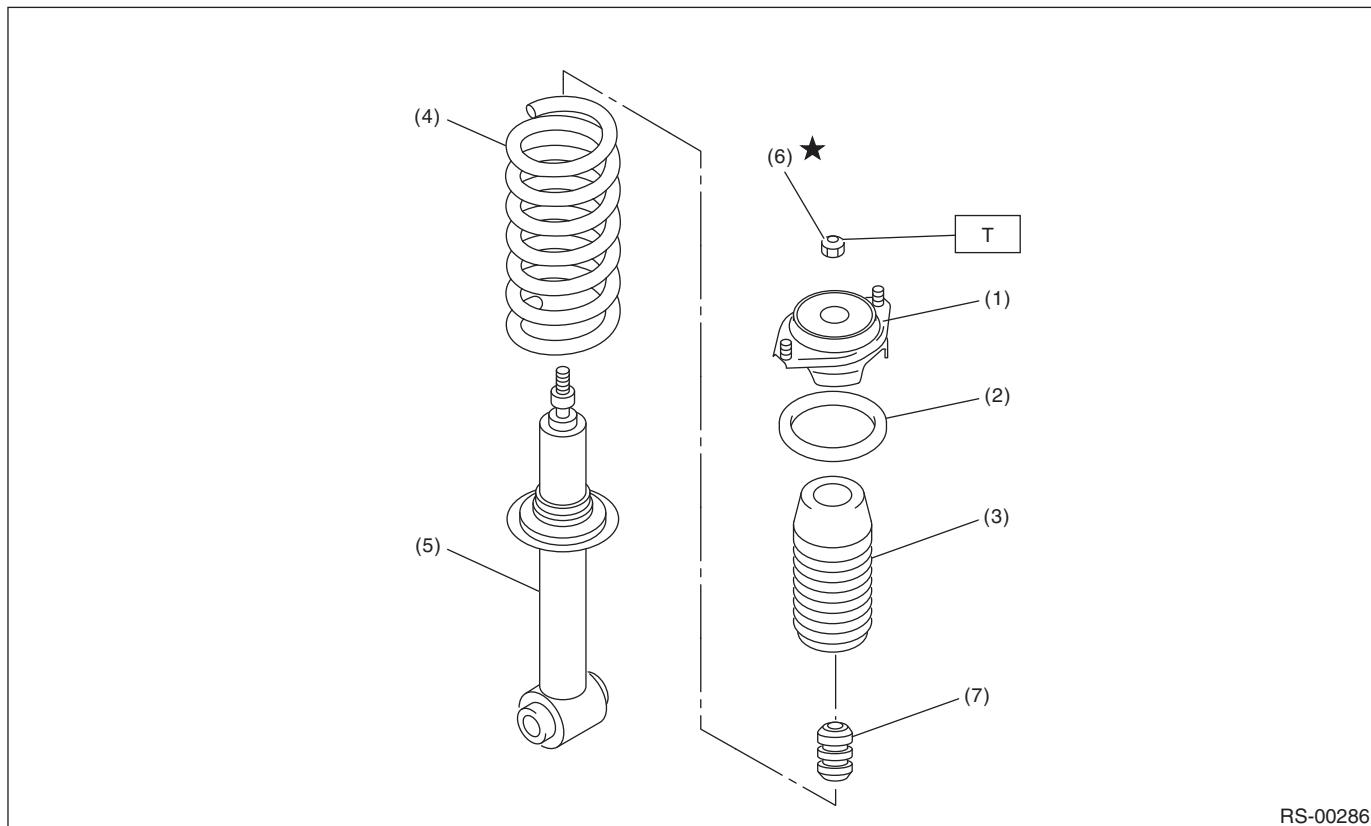
## REAR SUSPENSION

(1) Shock absorber	(14) Snap pin
(2) Self-locking nut	(15) Front sub frame support plate
(3) Rear stabilizer	(16) Rear sub frame
(4) Stabilizer bushing	(17) Rear sub frame stopper lower
(5) Stabilizer clamp	(18) Adjusting bolt
(6) Stabilizer link	(19) Adjusting washer
(7) Rear lateral link	(20) Rear lateral link bushing
(8) Rear housing	(21) Flange nut
(9) Upper arm	(22) Rear sub frame stopper upper (OUTBACK model)
(10) Trailing link	(23) Trailing link rear bushing
(11) Trailing link bushing	(24) Rear sub frame stopper upper (except for OUTBACK model)
(12) Front lateral link	(25) Rear housing bushing
(13) Front lateral link bushing	

### Tightening torque:N·m (kgf·m, ft·lb)

**T1: 30 (3.1, 22.1)**  
**T2: 33 (3.4, 24.3)**  
**T3: 38 (3.9, 28)**  
**T4: 60 (6.1, 44.3)**  
**T5: 70 (7.1, 51.6)**  
**T6: 80 (8.2, 59)**  
**T7: 120 (12.2, 88.5)**  
**T8: 200 (20.4, 147.5)**

## 2. SHOCK ABSORBER



(1) Mount	(5) Shock absorber
(2) Upper rubber sheet	(6) Self-locking nut
(3) Dust cover	(7) Helper
(4) Coil spring	

### Tightening torque:N·m (kgf·m, ft·lb)

**T: 25 (2.5, 18.4)**

### C: CAUTION

Please clearly understand and observe the following cautions. Please adhere to these cautions to avoid minor or serious injury to the person doing the work or people in the area.

#### 1. EACH PROCEDURE

- Wear appropriate work clothing, including a cap, protective goggles and protective shoes when performing any work.
- Before disposing of shock absorbers, be sure to bleed the gas out completely. Also, do not expose to flames or fire.
- Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly and replacement.
- Use SUBARU genuine grease etc. or equivalent. Do not mix grease etc. of different grades or manufacturers.
- Before securing a part on a vise, place cushioning material such as wood blocks, aluminum plate, or cloth between the part and the vise.
- Be sure to tighten fasteners including bolts and nuts to the specified torque.
- Place shop jacks or rigid racks at the specified points.

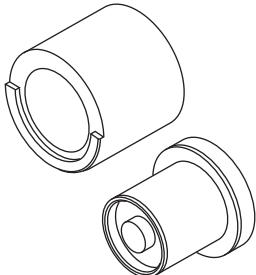
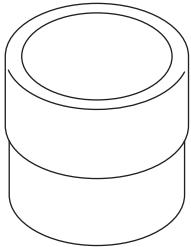
#### 2. OIL

When handling oil, adhere to the following to prevent unexpected accident.

- Prepare a container and cloth when performing work which oil possibly spills. If oil spills, wipe it off immediately to prevent from penetrating into floor or flowing out for environmental protection.
- Follow all government regulations concerning disposal of refuse when disposing.

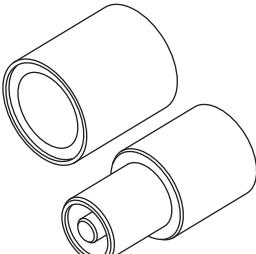
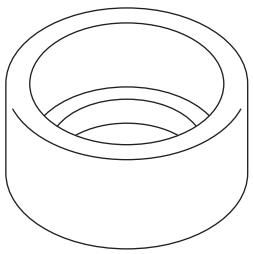
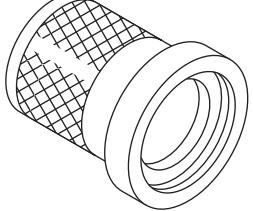
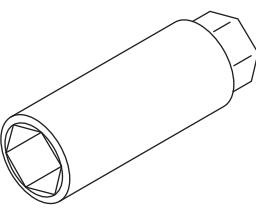
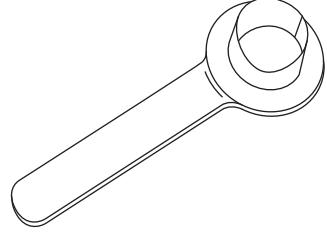
### D: PREPARATION TOOL

#### 1. SPECIAL TOOL

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST20099AE000	20099AE000	INSTALLER & REMOVER	Used for replacing the front lateral link bushing.
 ST-499755602	499755602	PRESS	Used for replacing the rear trailing link bushing.

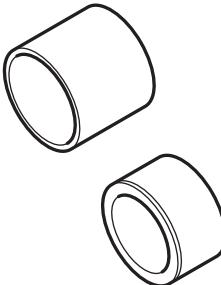
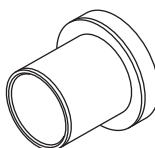
## General Description

### REAR SUSPENSION

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST20099AE010	20099AE010	INSTALLER & REMOVER	Used for replacing the rear lateral link bushing.
 ST20299AG010	20299AG010	BASE	Used for replacing the rear trailing link bushing.
 ST-899874100	899874100	INSTALLER	Used for replacing the rear trailing link bushing.
 ST20399FG000	20399FG000	STRUT MOUNT SOCKET	<ul style="list-style-type: none"> <li>Used for removing and installing shock mount.</li> <li>Used for checking torque of shock mount center nut.</li> </ul>
 ST28099PA090	28099PA090	OIL SEAL PROTECTOR	<ul style="list-style-type: none"> <li>Used for installing the rear drive shaft to the rear differential.</li> <li>For oil seal protection</li> </ul>

# General Description

REAR SUSPENSION

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
	20099PA010	INSTALLER & REMOVER	<ul style="list-style-type: none"> <li>Used for replacing the bushing of the rear housing.</li> <li>Used together with BUSHING REMOVER (20099FG000).</li> </ul>
	ST20099PA010	BUSHING REMOVER	<ul style="list-style-type: none"> <li>Used for replacing the bushing of the rear housing.</li> <li>Used together with base part of INSTALLER &amp; REMOVER (20099PA010).</li> </ul>

## 2. GENERAL TOOL

TOOL NAME	REMARKS
Alignment tester	Used for measuring wheel alignment.
Toe-in gauge	Used for toe-in measurement.
Jack	Used for removing and installing suspension.
Bearing puller	Used for removing bushings.
Coil spring compressor	Used for disassembling and assembling shock absorber.