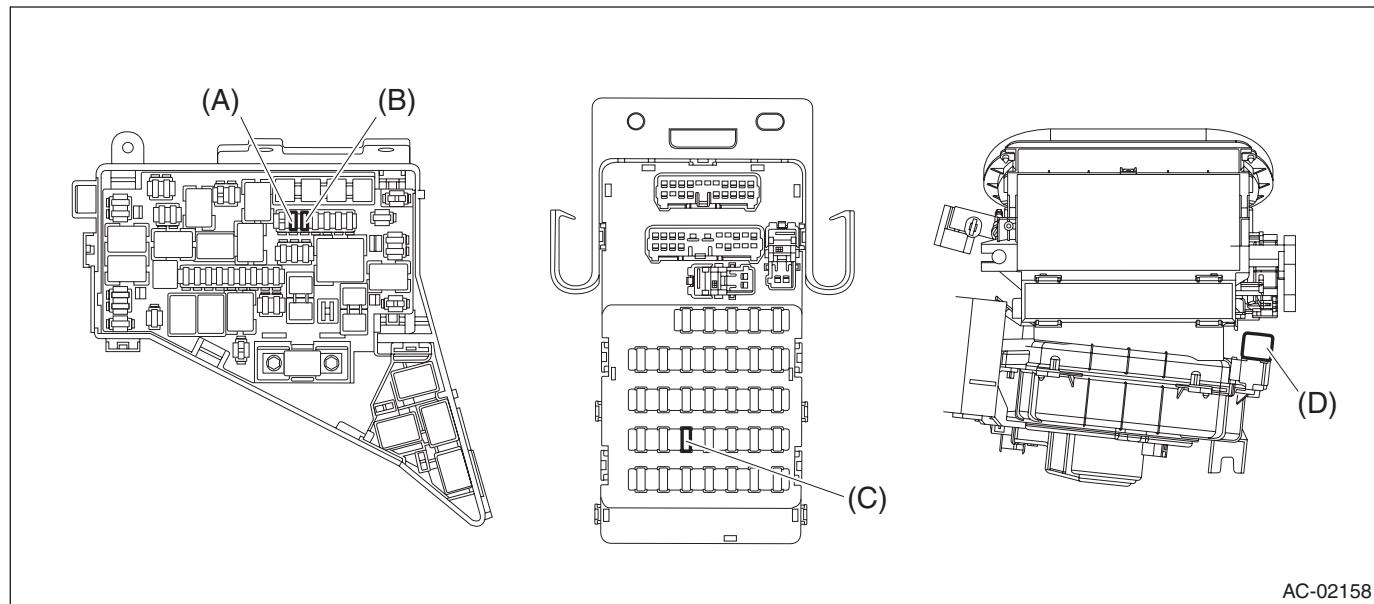


Relay and Fuse

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

7. Relay and Fuse

A: LOCATION



Main fuse box	Fuse 15 A (Blower motor relay) Fuse 15 A (Blower motor relay)	(A) (B)
Relay & fuse box	Fuse 15 A (Blower motor relay, intake door actuator)	(C)
Blower motor unit	Blower motor relay	(D)

NOTE:

For other related fuses, refer to the wiring diagram. <Ref. to WI-15, Power Supply Circuit.>

B: INSPECTION

1. CHECK FUSE

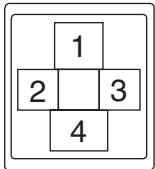
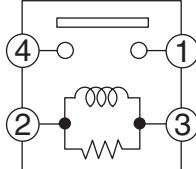
- 1) Remove the fuse and inspect visually.
- 2) If the fuse is blown out, replace the fuse.

NOTE:

If the fuse is blown again, check the system wiring harness.

2. CHECK RELAY

- 1) Measure the resistance between blower motor relay terminals.

Terminal No.	Inspection conditions	Standard	Circuit
1 — 4	Always	1 MΩ or more	 
1 — 4	Apply battery voltage between terminals 2 and 3.	Less than 1 Ω	

- 2) Replace the blower motor relay if the inspection result is not within the standard value.