

Diagnostic Procedure without Diagnostic Trouble Code (DTC)

AUTOMATIC TRANSMISSION (DIAGNOSTICS)

15. Diagnostic Procedure without Diagnostic Trouble Code (DTC)

A: CHECK MANUAL MODE SWITCH


DIAGNOSIS:

Input signal circuit of manual mode switch is open or shorted.

TROUBLE SYMPTOM:

Does not shift on manual mode.

WIRING DIAGRAM:

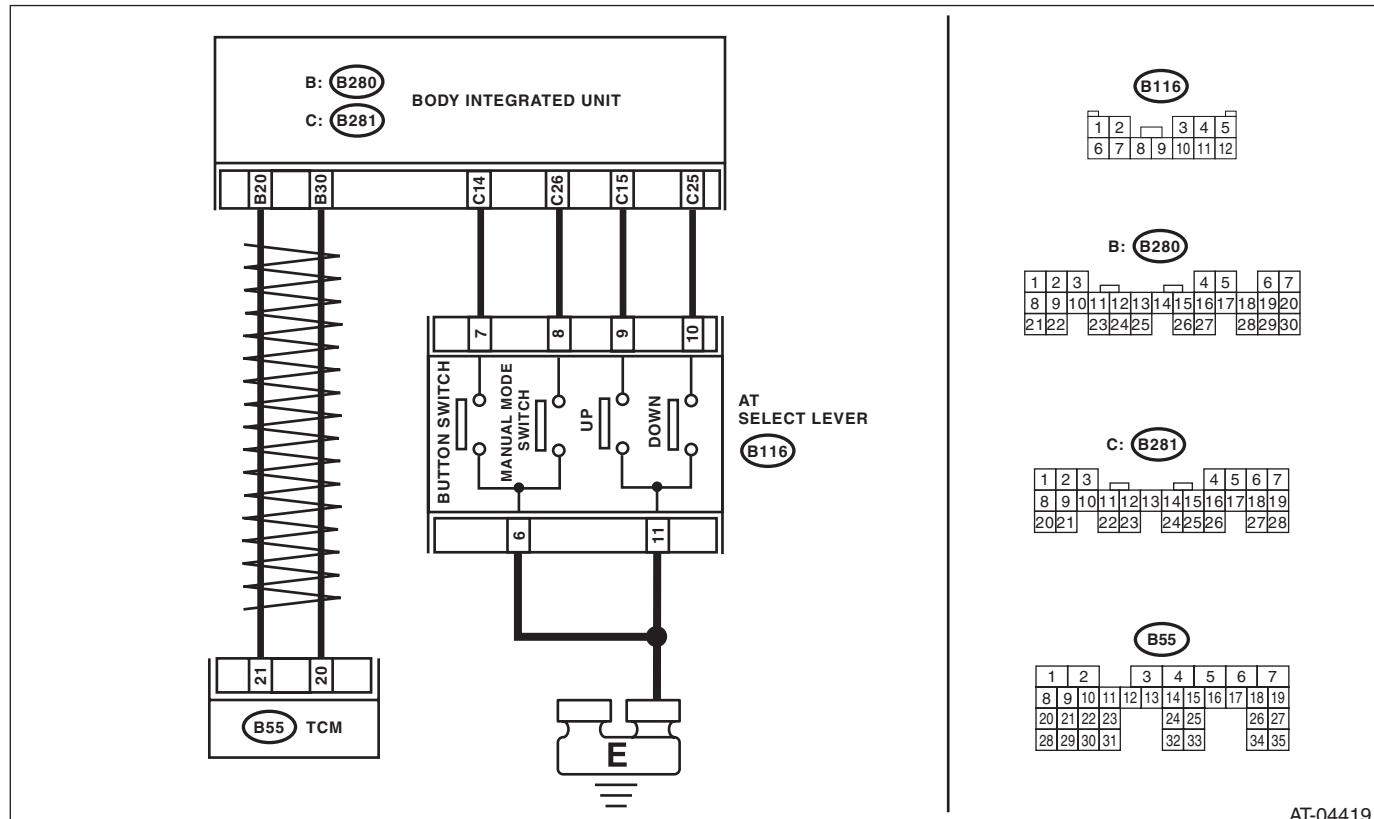

Step	Check	Yes	No
1 CHECK BODY INTEGRATED UNIT. 1) Perform ON/OFF operation on the manual mode switch. 2) Read the data of "Tiptronic Mode Switch" using Subaru Select Monitor.	Is the ON/OFF normally detected?	Go to step 2.	Go to step 7.
2 CHECK DTC OF BODY INTEGRATED UNIT.	Is DTC of CAN detected?	Perform the diagnosis according to DTC.	Go to step 3.
3 CHECK TCM. 1) Perform ON/OFF operation on the manual mode switch. 2) Read the data of "Tiptronic Mode Switch" using Subaru Select Monitor.	Is the ON/OFF normally detected?	Go to step 4.	Go to step 5.
4 CHECK SPORT SHIFT INDICATOR OF COMBINATION METER.	Is the SPORT shift indicator light OK?	Go to step 6.	Replace the combination meter assembly. <Ref. to IDI-11, Combination Meter.>

Diagnostic Procedure without Diagnostic Trouble Code (DTC)

AUTOMATIC TRANSMISSION (DIAGNOSTICS)

Step	Check	Yes	No
5 CHECK DTC OF TCM.	Is DTC of CAN detected?	Perform the diagnosis according to DTC.	Replace the TCM. <Ref. to 5AT-58, Transmission Control Module (TCM).>
6 CHECK METER DTC.	Is DTC of CAN detected?	Perform the diagnosis according to DTC.	Replace the meter.
7 CHECK GROUND CIRCUIT OF MANUAL MODE SWITCH. 1) Turn the ignition switch to OFF. 2) Disconnect the connector from manual mode switch. 3) Measure the resistance of harness between manual mode switch connector and chassis ground. <i>Connector & terminal (B116) No. 11 — Chassis ground:</i>	Is the resistance less than 1 Ω?	Go to step 8.	Repair the open circuit of harness between manual mode switch and chassis ground.
8 CHECK MANUAL MODE SWITCH. Measure the resistance between manual mode switch terminals. <i>Connector & terminal (B116) No. 9 — No. 11: (B116) No. 10 — No. 11:</i>	Is the resistance 1 MΩ or more?	Go to step 9.	Replace the guide plate assembly.
9 CHECK MANUAL MODE SWITCH. 1) Move the select lever to manual mode. 2) Measure the resistance between manual mode switch terminals. <i>Connector & terminal (B116) No. 9 — No. 11: (B116) No. 10 — No. 11:</i>	Is the resistance less than 1 Ω?	Go to step 10.	Replace the guide plate assembly.
10 CHECK HARNESS CONNECTOR BETWEEN BODY INTEGRATED UNIT AND MANUAL MODE SWITCH. 1) Disconnect the connector from body integrated unit. 2) Measure the resistance of harness between body integrated unit connector and manual mode switch connector. <i>Connector & terminal (B116) No. 9 — (B281) No. 15: (B116) No. 10 — (B281) No. 25:</i>	Is the resistance less than 1 Ω?	Go to step 11.	Repair the open circuit of harness between the manual mode switch connector and body integrated unit connector, or poor contact of connector.
11 CHECK HARNESS CONNECTOR BETWEEN BODY INTEGRATED UNIT AND MANUAL MODE SWITCH. 1) Disconnect the connector from body integrated unit. 2) Measure the resistance of harness between manual mode switch connector and chassis ground. <i>Connector & terminal (B116) No. 9 — Chassis ground: (B116) No. 10 — Chassis ground:</i>	Is the resistance 1 MΩ or more?	Go to step 12.	Repair the short circuit of harness between manual mode switch connector and body integrated unit connector.

Diagnostic Procedure without Diagnostic Trouble Code (DTC)

AUTOMATIC TRANSMISSION (DIAGNOSTICS)

Step	Check	Yes	No
12 CHECK INPUT SIGNAL TO BODY INTEGRATED UNIT. 1) Connect all connectors. 2) Turn the ignition switch to ON. (engine OFF) 3) Measure the voltage of signal to TCM. <i>Connector & terminal</i> (B281) No. 15 (+) — Chassis ground (-): (B281) No. 25 (+) — Chassis ground (-):	Is the voltage 9 V or more?	Go to step 13.	Replace the body integrated unit. <Ref. to SL-52, Body Integrated Unit.>
13 CHECK INPUT SIGNAL TO BODY INTEGRATED UNIT. 1) Hold the select lever to shift up side. 2) Measure the voltage of signal to TCM. <i>Connector & terminal</i> (B281) No. 15 (+) — Chassis ground (-): (B281) No. 25 (+) — Chassis ground (-):	Is the voltage less than 1 V?	Go to step 14.	Replace the body integrated unit. <Ref. to SL-52, Body Integrated Unit.>
14 CHECK GROUND CIRCUIT OF MANUAL MODE SWITCH. 1) Turn the ignition switch to OFF. 2) Disconnect the connector from manual mode switch. 3) Measure the resistance of harness between manual mode switch connector and chassis ground. <i>Connector & terminal</i> (B116) No. 11 — Chassis ground:	Is the resistance less than 1 Ω ?	Go to step 15.	Repair the open circuit of harness between manual mode switch and chassis ground.
15 CHECK FOR POOR CONTACT.	Is there poor contact of the manual mode switch circuit?	Repair the poor contact.	Temporary poor contact of the manual mode switch circuit connector or harness

Diagnostic Procedure without Diagnostic Trouble Code (DTC)

AUTOMATIC TRANSMISSION (DIAGNOSTICS)

B: CHECK SPORT SHIFT INDICATOR LIGHT


DIAGNOSIS:

Output signal circuit of SPORT shift indicator light is open or shorted.

TROUBLE SYMPTOM:

- SPORT shift indicator light is not illuminated.
- SPORT shift indicator light display does not change.
- SPORT shift indicator light remains illuminated.

WIRING DIAGRAM:

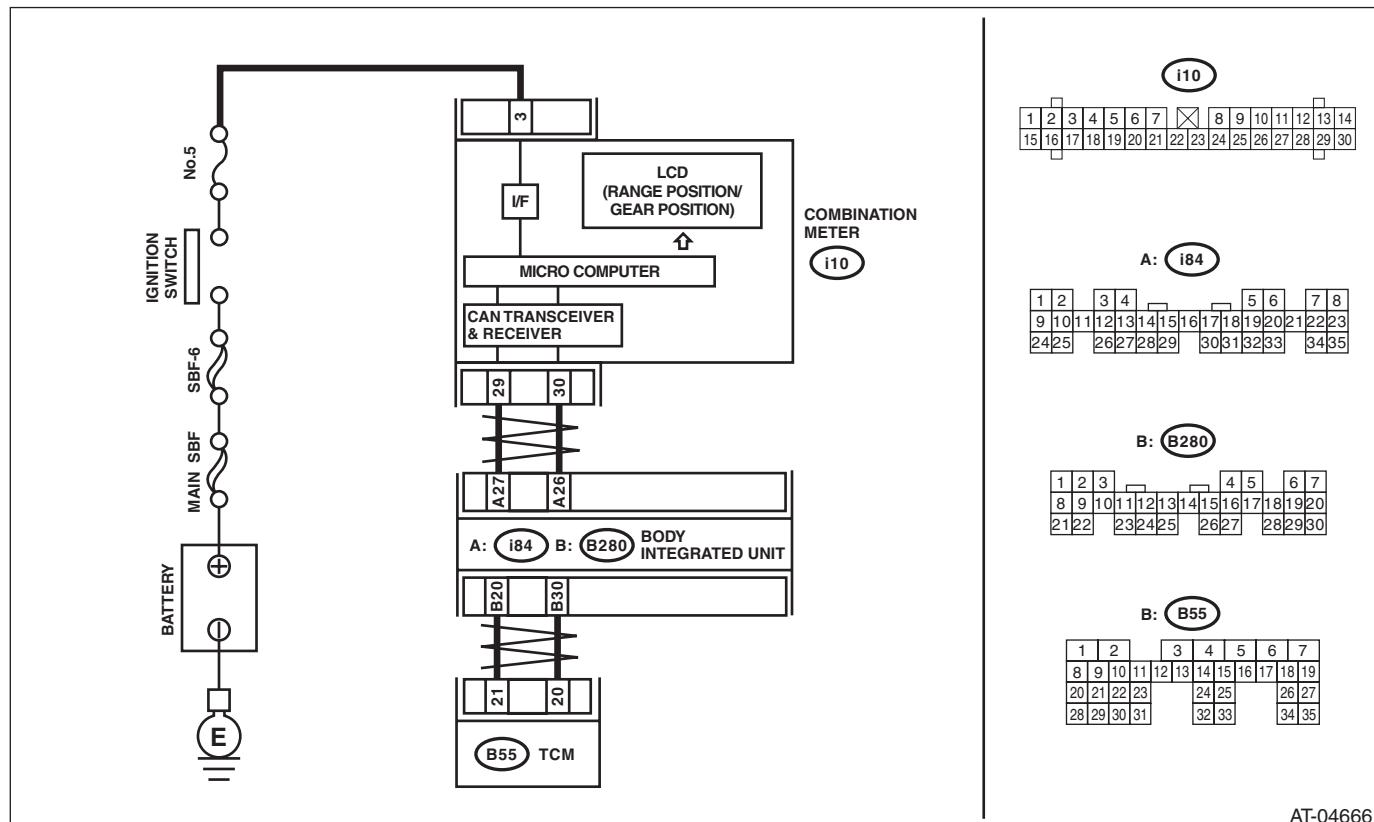

AT-04666

Step	Check	Yes	No
1 CHECK BODY INTEGRATED UNIT. Check DTC of body integrated unit.	Is DTC of AT CAN communication circuit displayed?	Perform the diagnosis according to DTC.	Go to step 2.
2 CHECK TCM. Check DTC of TCM.	Is DTC of AT CAN communication circuit displayed?	Perform the diagnosis according to DTC.	Go to step 3.
3 CHECK TCM. 1) Turn the ignition switch to OFF. 2) Connect the Subaru Select Monitor to data link connector. 3) Turn the ignition switch to ON. (engine OFF) 4) Run the Subaru Select Monitor. 5) Shift the select lever to the manual mode side, and then downshift with the select lever. 6) Read the indicator.	Is the gear position at 1 and "▲" displayed?	Go to step 4.	Replace the TCM. <Ref. to 5AT-58, Transmission Control Module (TCM).>
4 CHECK TCM. 1) Shift up the select lever. 2) Read the indicator.	Is the gear position at 2 and "▼" displayed?	Go to step 5.	Replace the TCM. <Ref. to 5AT-58, Transmission Control Module (TCM).>

Diagnostic Procedure without Diagnostic Trouble Code (DTC)

AUTOMATIC TRANSMISSION (DIAGNOSTICS)

Step	Check	Yes	No
5 CHECK BODY INTEGRATED UNIT. Read the data of "Shift Position" using Subaru Select Monitor.	Is "2" displayed?	Go to step 6 .	Check body integrated unit. <Ref. to SL-52, Body Integrated Unit.>
6 CHECK COMBINATION METER.	Is the SPORT shift indicator OK?	Refer to "General Diagnostic Table". <Ref. to 5AT(diag)-101, General Diagnostic Table.>	Replace the combination meter assembly. <Ref. to IDI-11, Combination Meter.>

C: CHECK BUZZER


DIAGNOSIS:

Output signal circuit of buzzer is open or shorted.

TROUBLE SYMPTOM:

Buzzer remains beeping.

WIRING DIAGRAM:

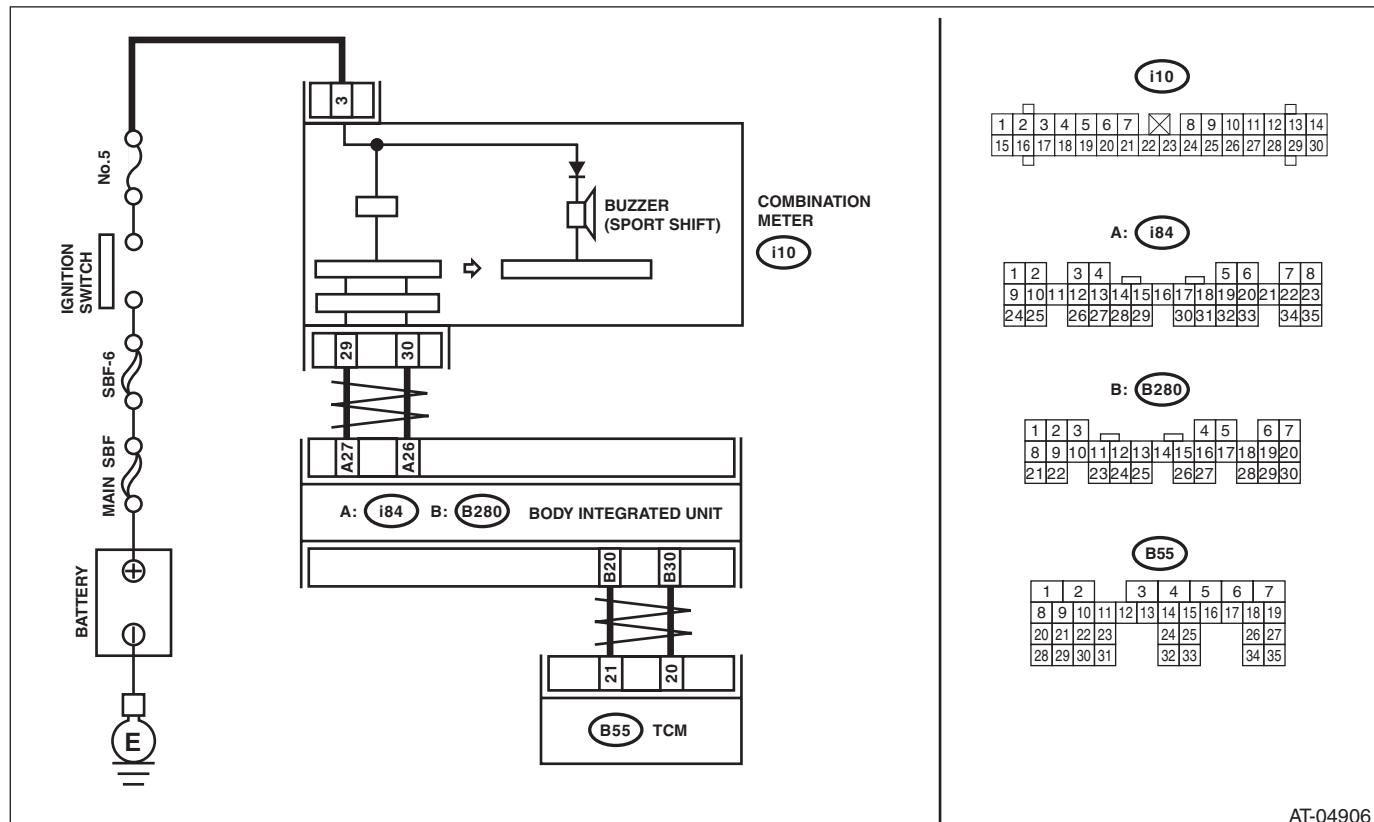

AT-04906

Step	Check	Yes	No
1 CHECK BODY INTEGRATED UNIT. Check DTC of body integrated unit.	Is DTC of CAN communication displayed?	Perform the diagnosis according to DTC.	Go to step 2.
2 CHECK TCM. Check DTC of TCM.	Is DTC of CAN communication displayed?	Perform the diagnosis according to DTC.	Go to step 3.
3 CHECK BUZZER STOP. Disconnect the connector (B55).	Does the buzzer stop?	Replace the TCM. <Ref. to 5AT-58, Transmission Control Module (TCM).>	Go to step 4.
4 CHECK BODY INTEGRATED UNIT. 1) Turn the ignition switch to OFF. 2) Connect the Subaru Select Monitor to data link connector. 3) Turn the ignition switch to ON. (engine OFF) 4) Run the Subaru Select Monitor. 5) Read the "SPORT shift (buzzer 1)" and "SPORT shift (buzzer 2)" data using Subaru Select Monitor.	Is "ON" displayed?	Replace the body integrated unit. <Ref. to SL-52, Body Integrated Unit.>	Go to step 5.

Diagnostic Procedure without Diagnostic Trouble Code (DTC)

AUTOMATIC TRANSMISSION (DIAGNOSTICS)

Step	Check	Yes	No
5 CHECK COMBINATION METER.	Is the buzzer OK?	Refer to "General Diagnostic Table". <Ref. to 5AT(diag)-101, General Diagnostic Table.>	Replace the combination meter assembly. <Ref. to IDI-11, Combination Meter.>